





FLASHES

COLON DISPLAY

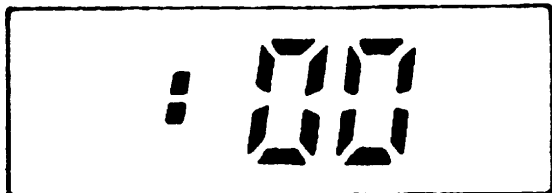

COLON MUST BE DISPLAYED  
TO RECEIVE SERVICE CODES.

LO BAT INDICATOR

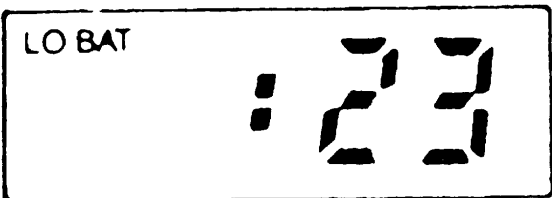

IF LO BAT SHOWS STEADILY WITH  
SERVICE CODE, REPLACE TESTER'S  
9V BATTERY.



STEADY