



POWER MIRROR CONTROL SYSTEM PARTS LOCATION

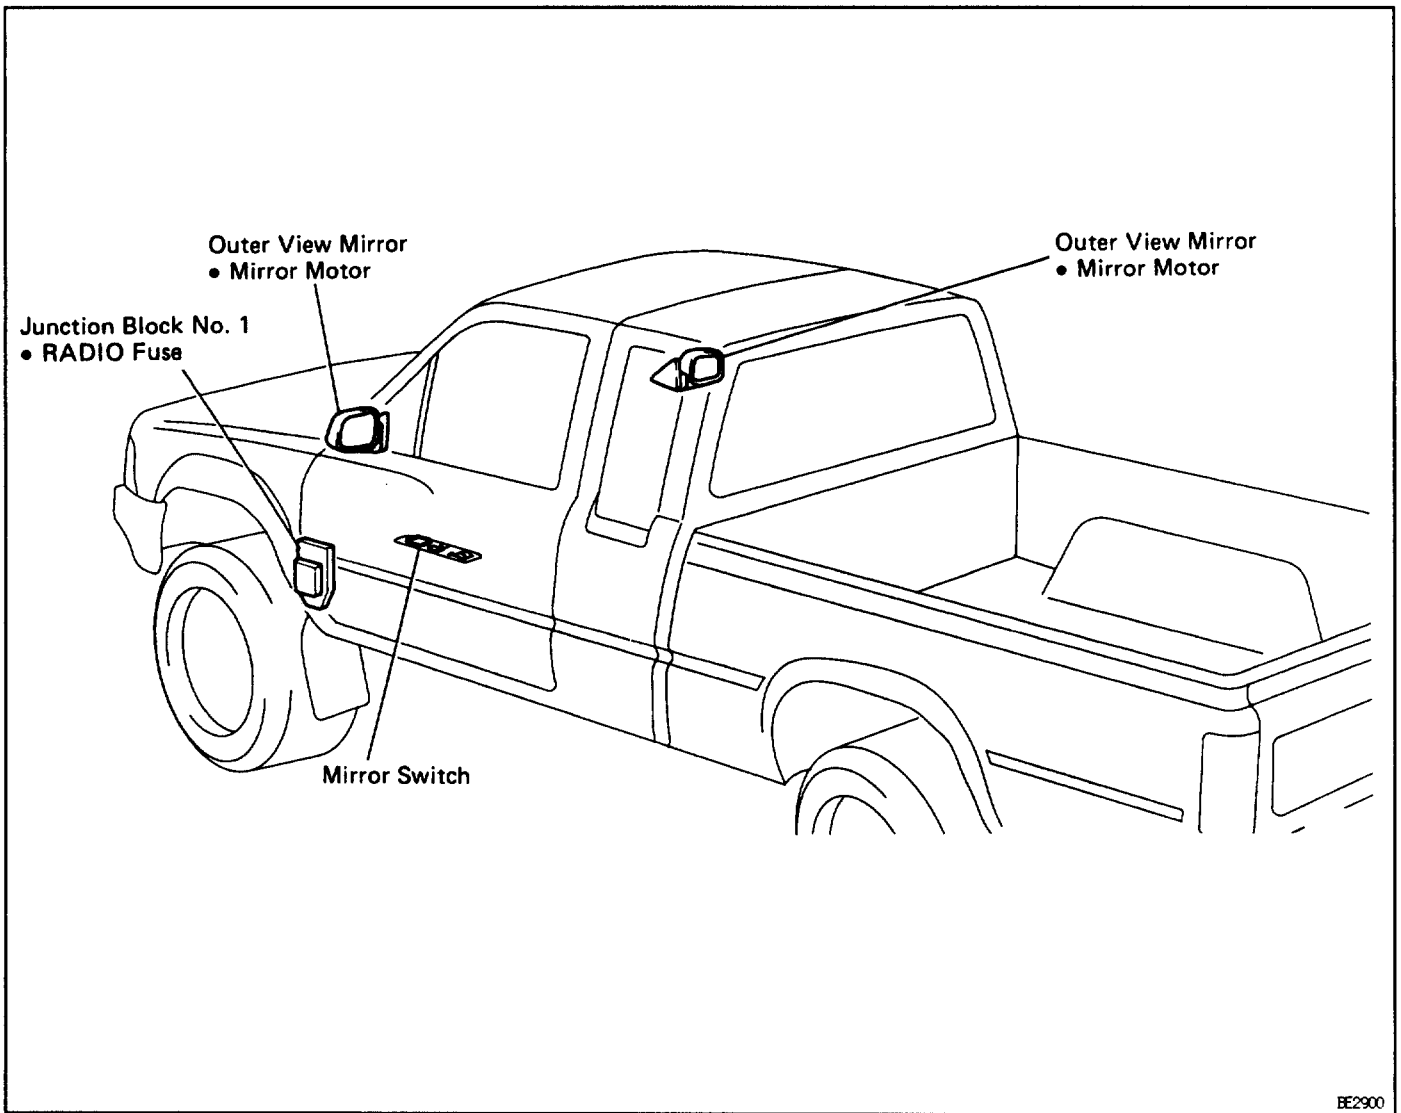

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name	(See page)
Remote Control Mirror System does not operate	1. RADIO Fuse 2. Mirror Switch 3. Mirror Motor 4. Wire Harness	(BE-11) (BE-80) (BE-81)

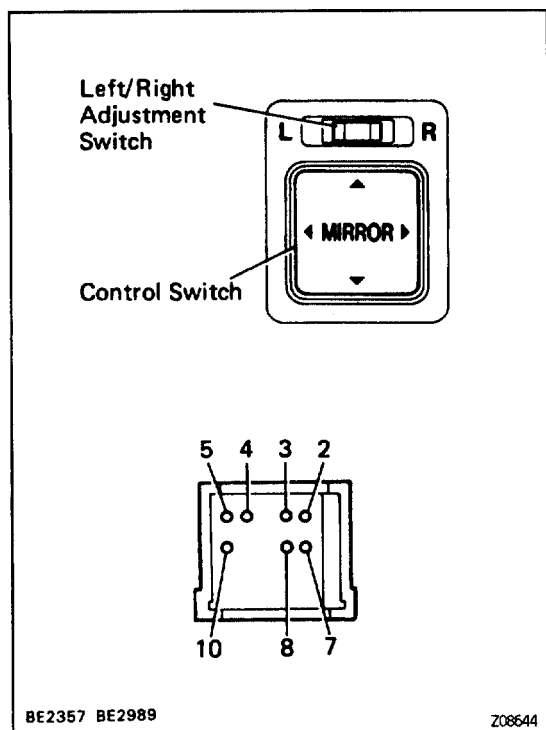

MIRROR SWITCH INSPECTION

INSPECT MIRROR SWITCH

Continuity

LEFT SIDE

Switch position	Tester connection to terminal number	Specified value
OFF	–	No continuity
UP	2 – 10 7 – 8	Continuity
DOWN	2 – 7 8 – 10	Continuity
LEFT	3 – 10 7 – 8	Continuity
RIGHT	3 – 7 8 – 10	Continuity

If continuity is not as specified, replace the switch.

OFF


Switch position	Tester connection to terminal number	Specified value
OFF	–	No continuity
UP	7 – 8	Continuity
DOWN	8 – 10	Continuity
LEFT	7 – 8	Continuity
RIGHT	8 – 10	Continuity

If continuity is not as specified, replace the switch.

RIGHT SIDE

Switch position	Tester connection to terminal number	Specified value
OFF	–	No continuity
UP	5 – 10 7 – 8	Continuity
DOWN	5 – 7 8 – 10	Continuity
LEFT	4 – 10 7 – 8	Continuity
RIGHT	4 – 7 8 – 10	Continuity


If continuity is not as specified, replace the switch.

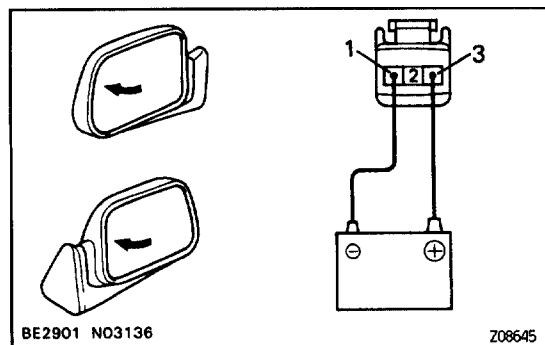


MIRROR MOTOR INSPECTION

INSPECT MIRROR MOTOR


- (a) Connect the positive (+) lead from the battery to terminal 3 and negative (-) lead to terminal 1, check that the mirror turns to left side.

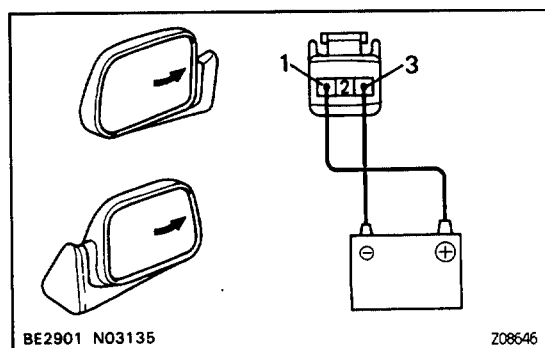

- (b) Reverse the polarity, check that the mirror turns to right side.

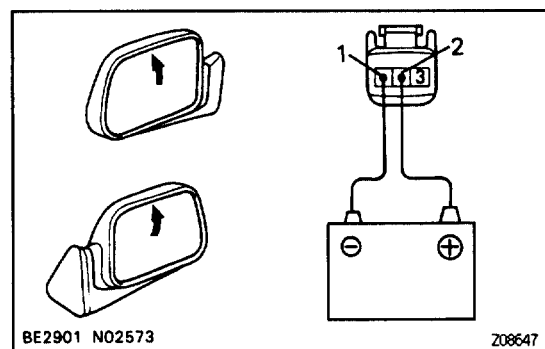

- (c) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, check that the mirror turns upward.

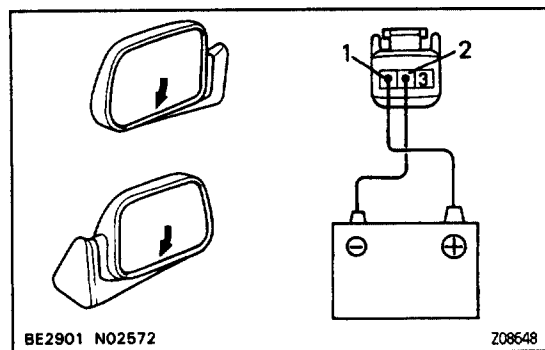

- (d) Reverse the polarity, check that the mirror turns downward. If operation is not as specified, replace the mirror assembly.