



ONE TOUCH TAIL GATE COMPONENTS

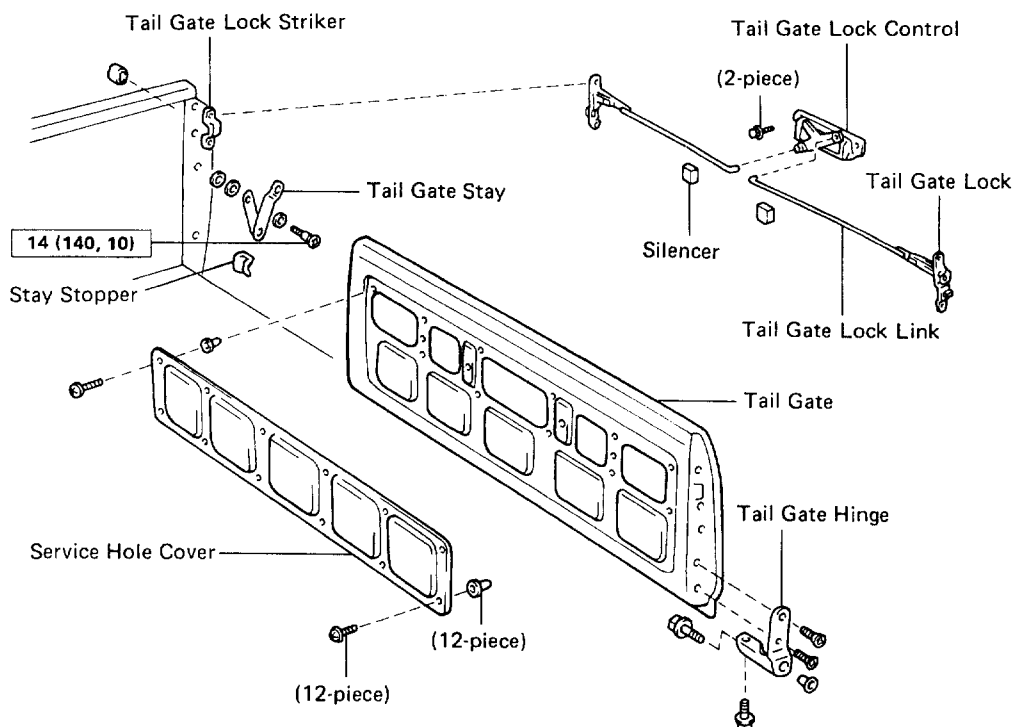

N03042


N·m (kgf·cm, ft·lbf) : Specified torque

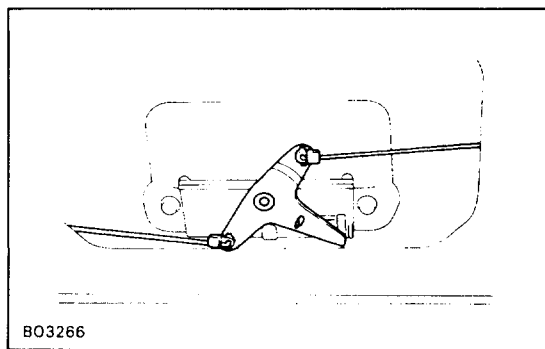

B03266


TAIL GATE LOCK REMOVAL

1. **REMOVE SERVICE HOLE COVER**
Remove 12 screws and the service hole cover.
2. **DISCONNECT TAIL GATE LOCK LINK FROM TAIL GATE LOCK CONTROL**

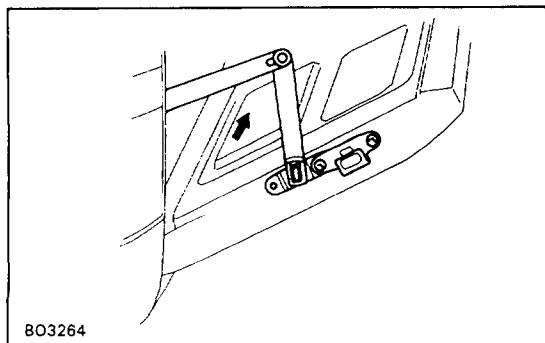

B03264

3. **REMOVE TAIL GATE STAY**
 - (a) Disconnect the tail gate stay from the tail gate.
 - (b) Remove the bolt and the tail gate stay from the body.
4. **REMOVE TAIL GATE LOCK FROM TAIL GATE**
Remove 2 screws and the tailgate lock.

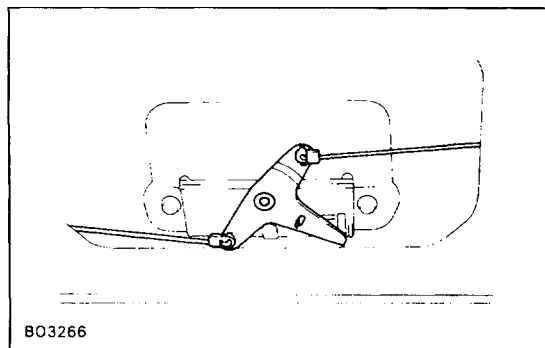

TAIL GATE LOCK INSTALLATION

1. INSTALL TAIL GATE LOCK TO TAIL GATE


Install the tail gate lock with 2 screws.

2. INSTALL TAIL GATE STAY

(a) Install the tail gate stay and the bolt.

Torque: 14 N·m (140 kgf·cm, 10ft·lbf)


(b) Connect the tail gate stay to the gate.

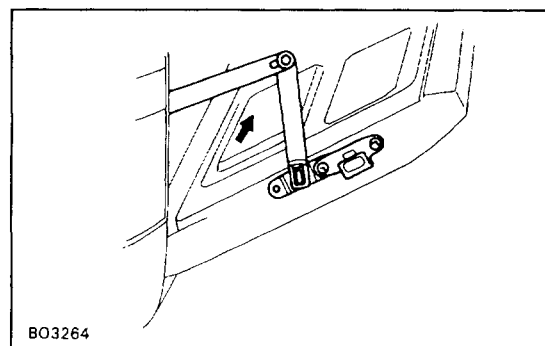

3. CONNECT TAIL GATE STAY TO TAIL GATE

4. INSTALL SERVICE HOLE COVER

Install service hole cover with the 12 screws.

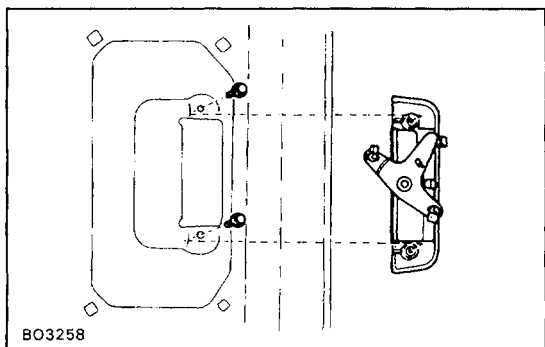

TAIL GATE LOCK CONTROL REMOVAL

1. REMOVE SERVICE HOLE COVER

2. DISCONNECT 2 TAIL GATE LOCK LINKS

3. REMOVE TAIL GATE CONTROL

TAIL GATE LOCK CONTROL INSTALLATION

INSTALL TAIL GATE LOCK CONTROL IN REVERSE ORDER OF REMOVAL