


## GENERAL INSPECTION

### 1. INSPECT TIRE

- (a) Check the tires for wear and for the proper inflation pressure.

**Cold tire inflation pressure:**


See page [SA-203,205](#)

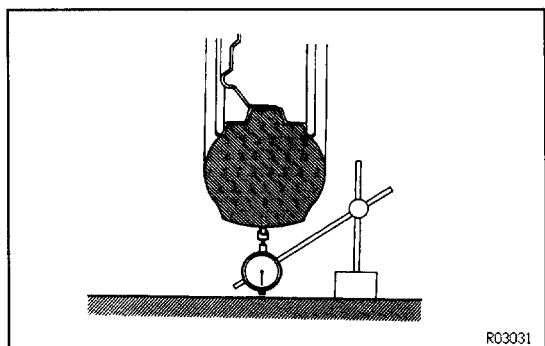

- (b) Check the tire runout.

**Tire runout:**

**Less than 3.0 mm (0.118 in.)**

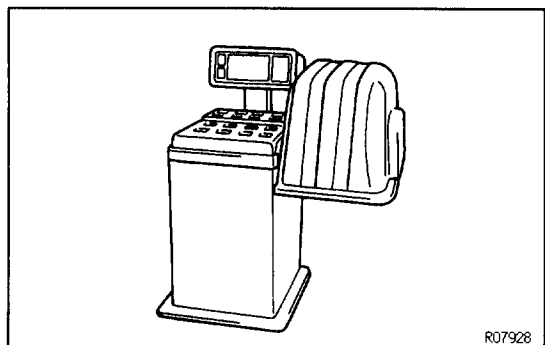

### 2. INSPECT WHEEL BALANCE

- (a) Check and adjust the Off-the-car balance.  
(b) If necessary, check and adjust the On-the-car balance.

**Unbalance after adjustment:**

**15.0 g (0.033 lb) or less**

3. CHECK WHEEL BEARING LOOSENESS
4. CHECK FRONT SUSPENSION FOR LOOSENESS
5. CHECK STEERING LINKAGE FOR LOOSENESS
6. CHECK BALL JOINT FOR EXCESSIVE LOOSENESS
7. CHECK SHOCK ABSORBER AS WORK PROPERLY
  - Check for oil leaks
  - Check mounting bushing for wear
  - Bounce the vehicle up and down several times to stabilize the suspension.