


## BLOWER MOTOR

### BLOWER MOTOR REMOVAL

1. **DISCONNECT NEGATIVE (-) CABLE FROM BATTERY**
2. **REMOVE BLOWER MOTOR**
  - (a) Disconnect the connectors from the blower motor and the blower resistor.
  - (b) Remove 3 screws and the blower motor.

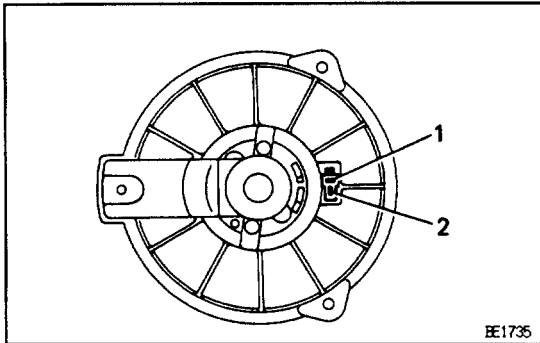

### MOTOR INSPECTION

#### INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operation is smooth.

### MOTOR INSTALLATION

1. **INSTALL BLOWER MOTOR**
  - (a) Install the blower motor with 3 screws.
  - (b) Connect the connectors to the blower motor and the blower resistor.
2. **CONNECT NEGATIVE (-) CABLE TO BATTERY**