

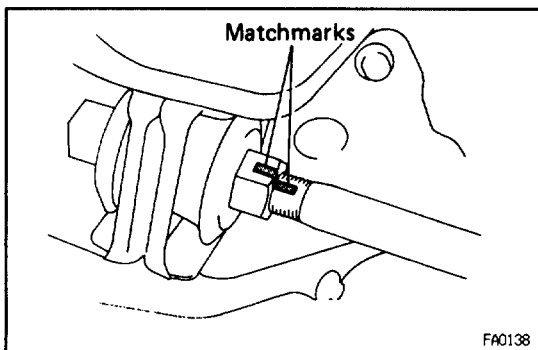



STRUT BAR COMPONENTS

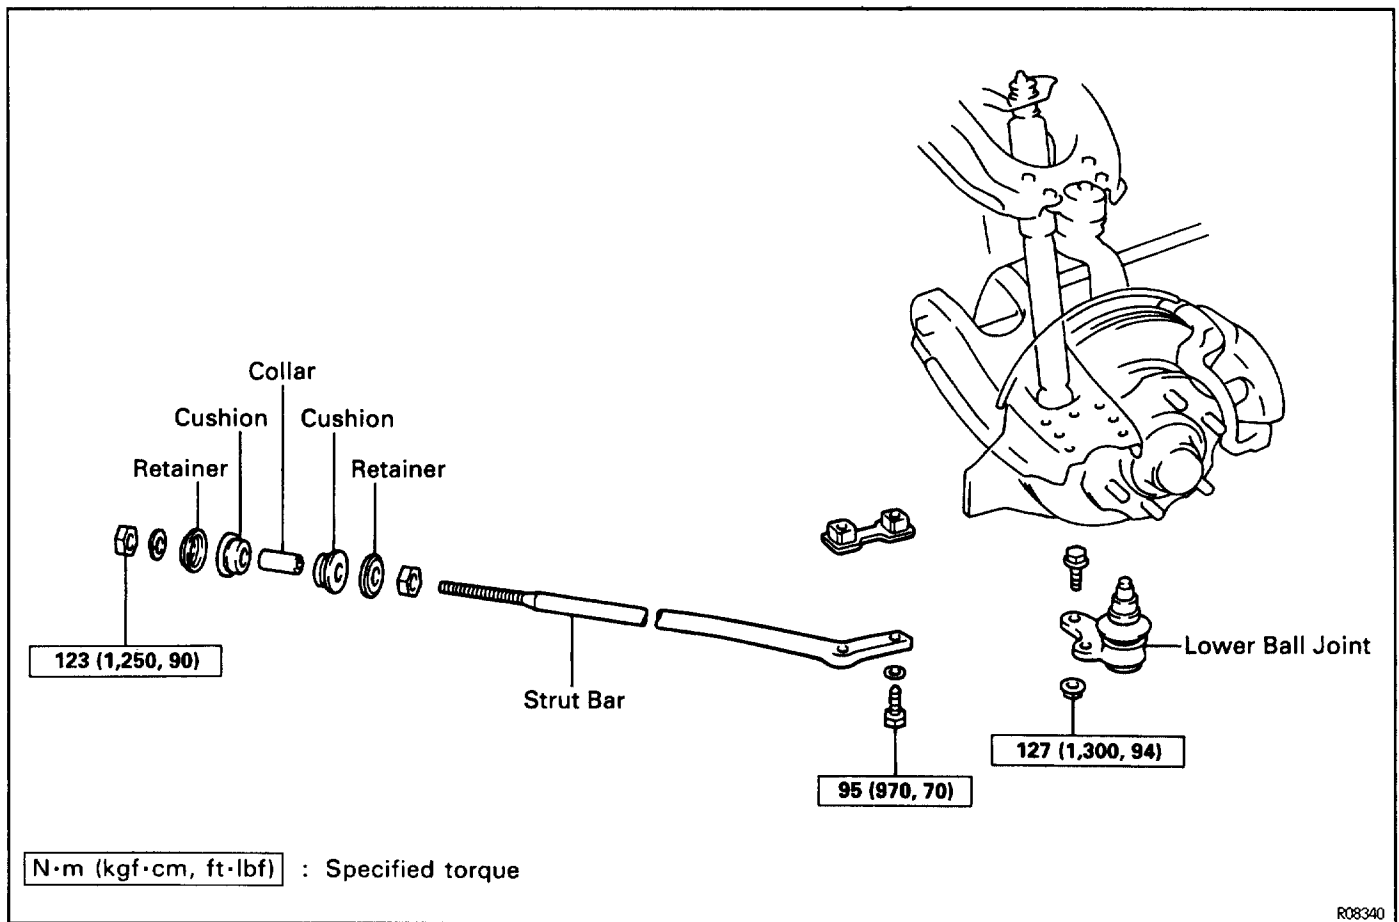

STRUT BAR REMOVAL

- JACK UP VEHICLE**
- PLACE MATCHMARKS ON STRUT BAR**
Place the matchmarks on the strut bar and nut.
- REMOVE FRONT NUT FROM STRUT BAR**
- REMOVE STRUT BAR FROM LOWER ARM**
Remove the nuts holding the strut bar to the lower arm, and remove the strut bar.

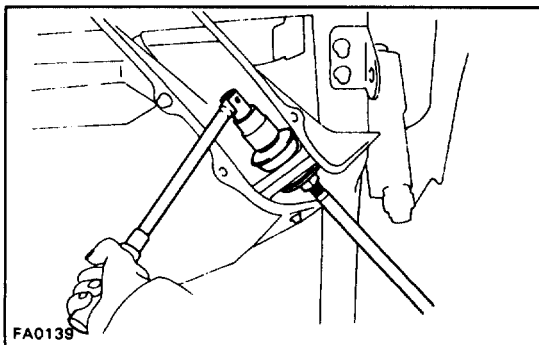


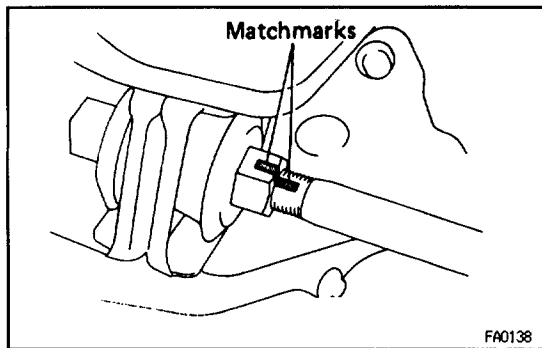

STRUT BAR INSTALLATION

1. INSTALL FRONT NUT

Install the front nut and align the matchmarks on the strut bar.

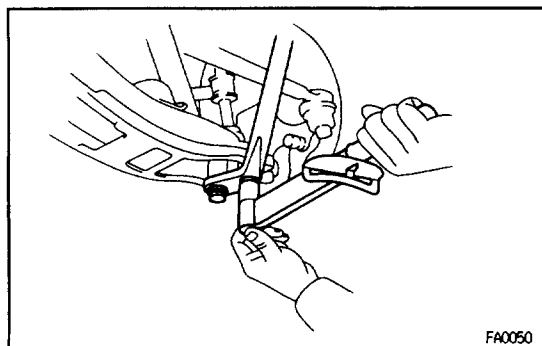


2. INSTALL STRUT BAR TO BRACKET

- (a) Install the washer and bushing to the strut bar and install it to the bracket.
- (b) Install the collar, bushing and washer to the strut bar.
- (c) Finger tighten the front nut.

3. CONNECT STRUT BAR TO LOWER ARM

Torque: 95 N·m (970 kgf·cm, 70 ft·lbf)

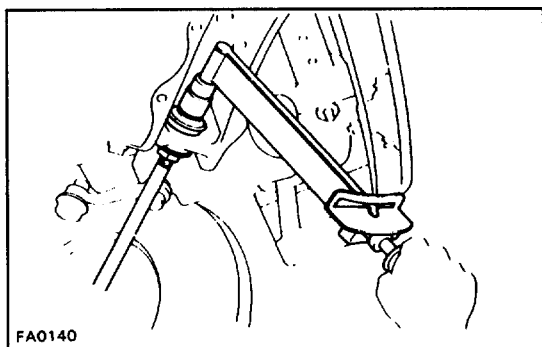

4. TORQUE FRONT NUT

- (a) Remove the stands and the vehicle to stabilize the suspension.
- (b) Torque the front nut.

Torque: 123 N·m (1,250 kgf·cm, 90 ft·lbf)

5. CHECK FRONT WHEEL ALIGNMENT

(See page [SA-4](#))