
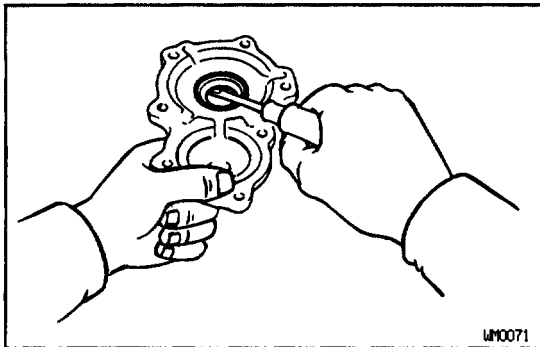



FRONT BEARING RETAINER COMPONENTS

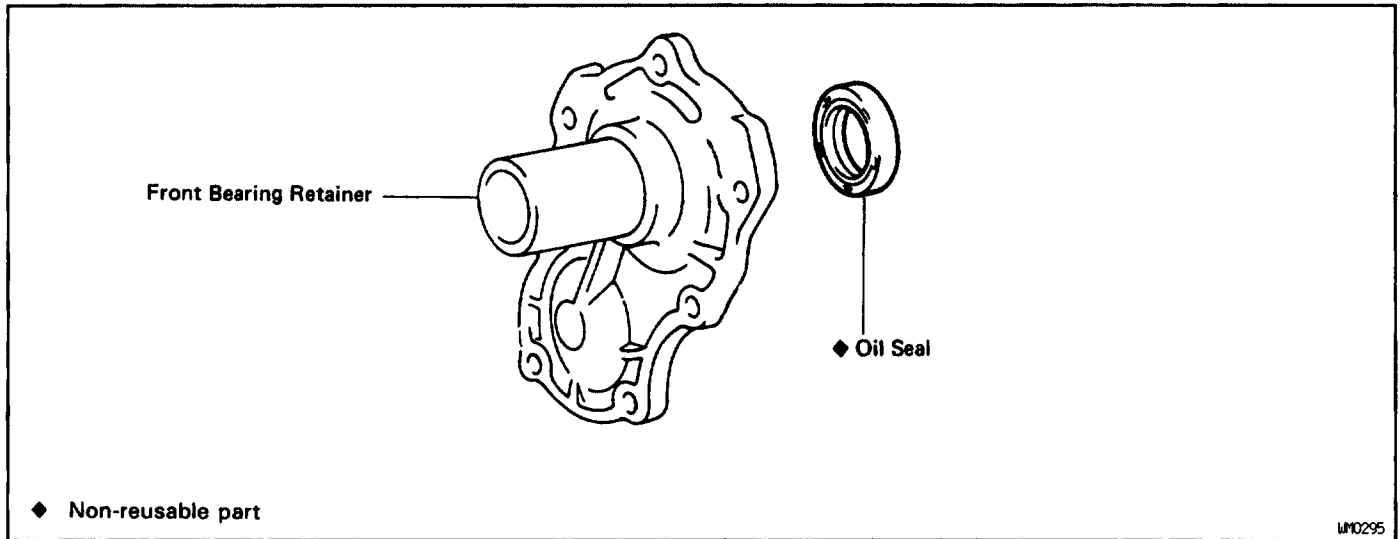

OIL SEAL REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

- (a) Using a screwdriver, pry out the oil seal.

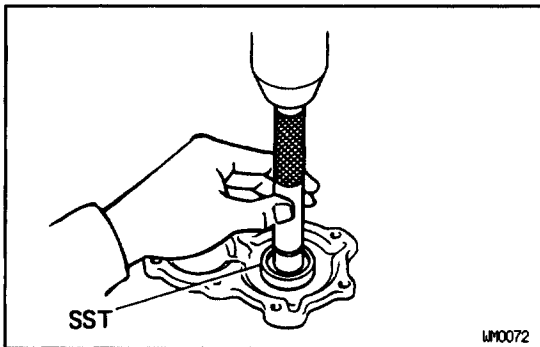

- (b) Using SST and a press, install a new oil seal.
SST 09608-20012 (09608-03020, 09608-00080)

Drive in depth:

11.4-12.0 mm (0.449-0.472 in.) from retainer end