



STOP LIGHT SYSTEM PARTS LOCATION

J/B No.1
• STOP Fuse

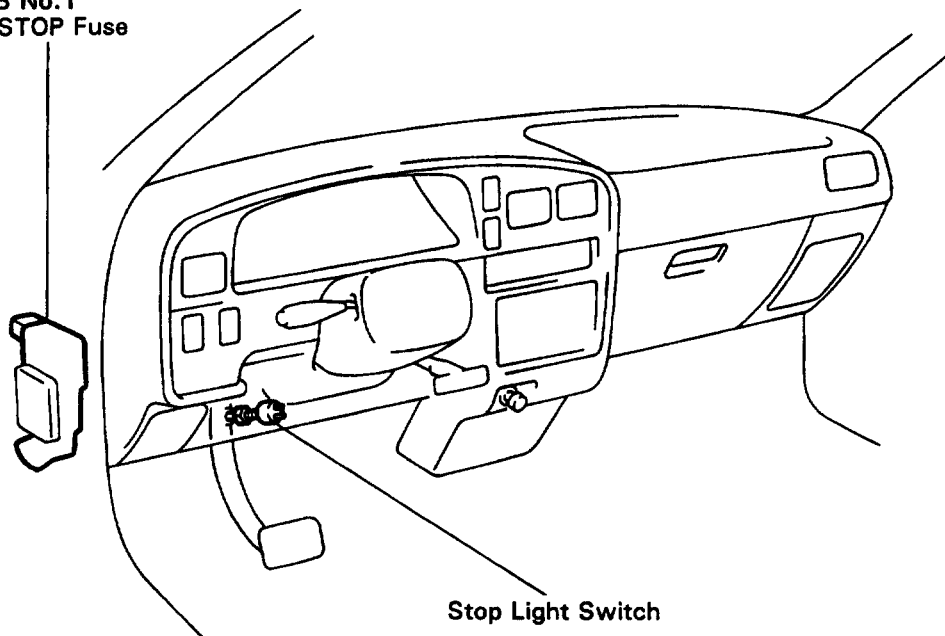


Hi-Mount Stop Light

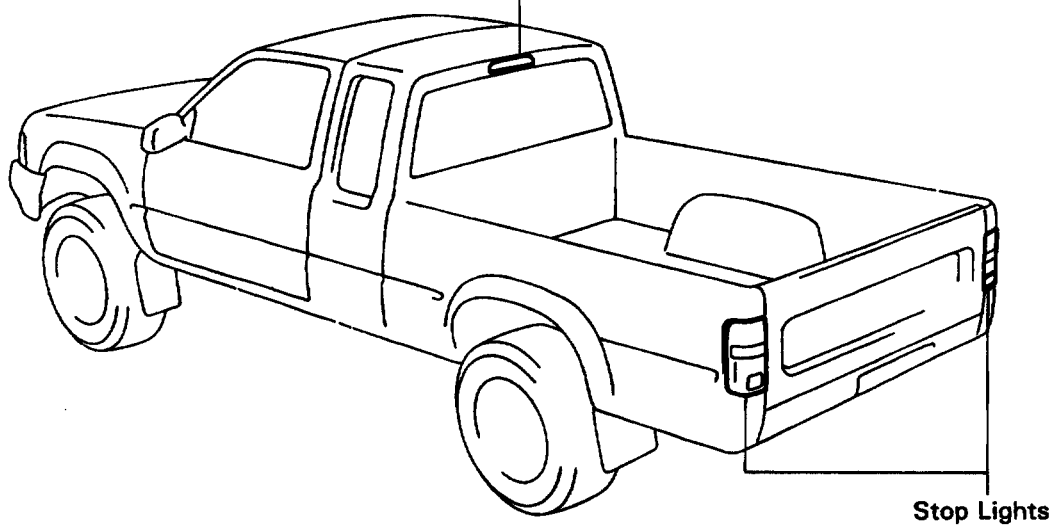

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name	(See page)
Stop light does not light up	1. STOP Fuse 2. Stop Light Switch 3. Wire Harness 4. Bulb	(BE-11) (BE-36)
Stop light remains always on	1. Stop Light Switch 2. Wire Harness	(BE-36)
Only one light does not light up	1. Wire Harness 2. Bulb	

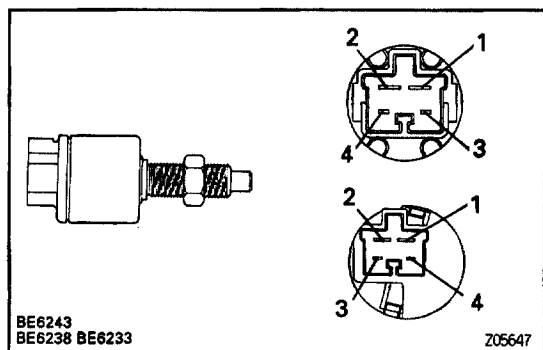

STOP LIGHT SWITCH INSPECTION


INSPECT STOP LIGHT SWITCH

w/ Cruise Control

Continuity

Switch position	Tester connection to terminal number	Specified value
Switch pin free (Brake Pedal depressed)	1 – 2	Continuity
Switch pin pushed in (Brake pedal released)	3 – 4	Continuity

If continuity is not as specified, replace the switch.

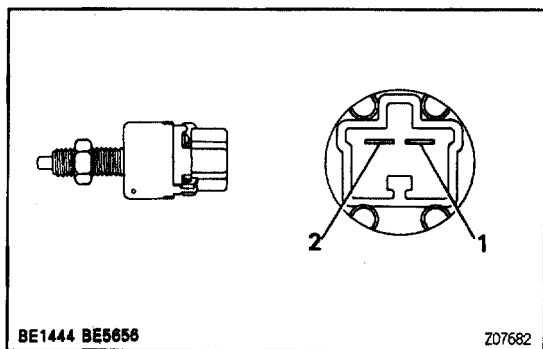

w/o Cruise Control

Continuity

Switch position	Tester connection to terminal number	Specified value
Switch pin free (Brake Pedal depressed)	1 – 2	Continuity
Switch pin pushed in (Brake pedal released)	1 – 2	No continuity

If continuity is not as specified, replace the switch.