



MOON ROOF COMPONENTS

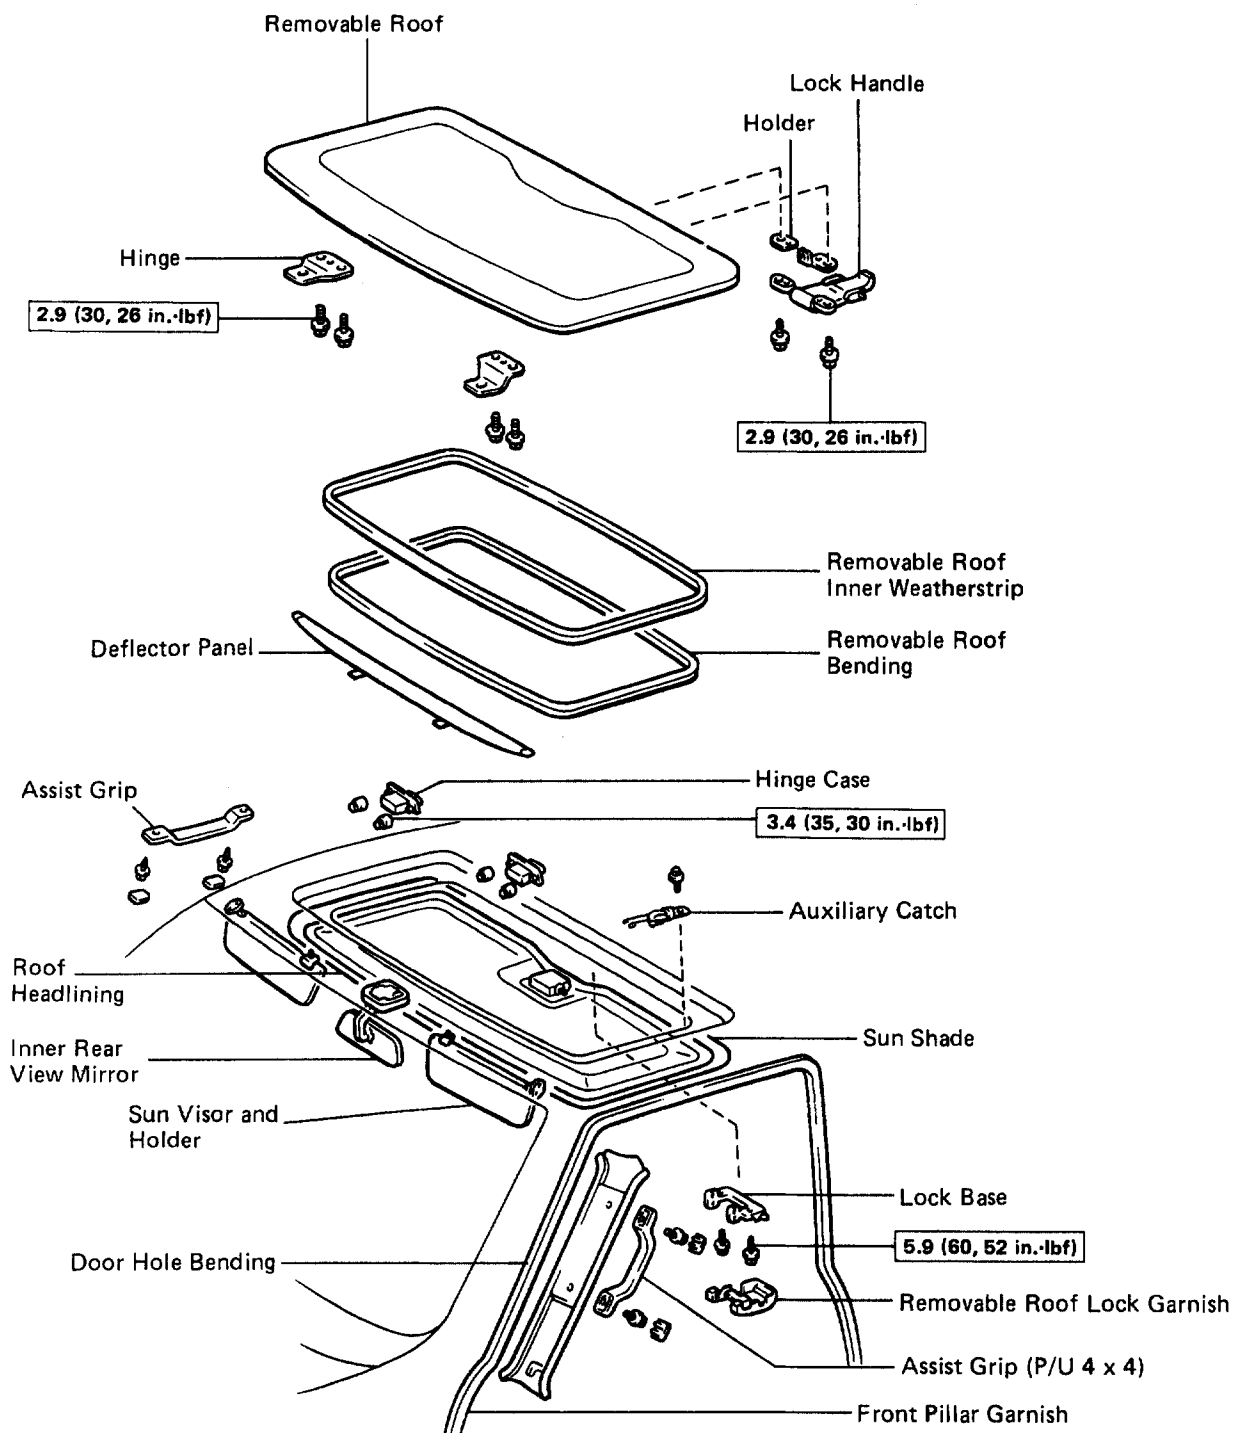

N02777


N·m (kgf·cm, ft·lbf) : Specified torque

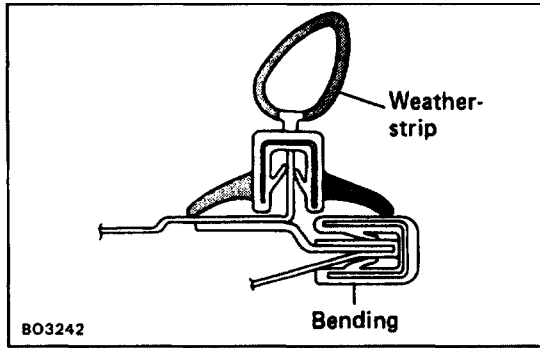


MOON ROOF REMOVAL

(See page [BO-34](#))

1. REMOVE REMOVABLE ROOF WITH SUN SHADE
2. REMOVE REMOVABLE ROOF INNER WEATHERSTRIP
3. REMOVE REMOVABLE ROOF BENDING

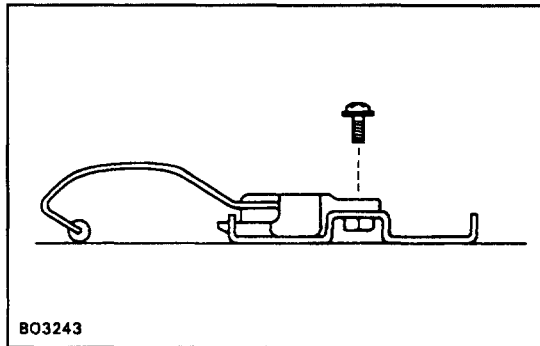

4. REMOVE REMOVABLE ROOF AUXILIARY CATCH

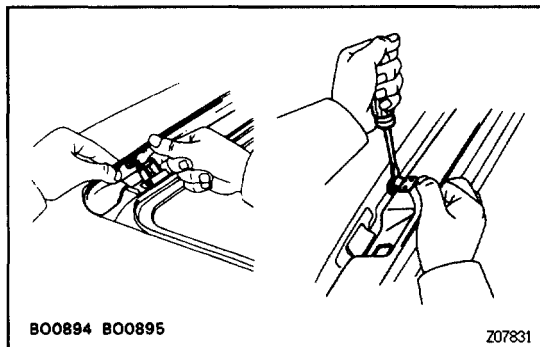


5. REMOVE WIND DEFLECTOR PANEL

- (a) Remove 2 outside deflector clips on the left and right sides.
- (b) Remove 2 inside deflector clips on the left and right side, while prying it with a screwdriver.

HINT: Tape the screwdriver tip before use.

6. REMOVE REMOVABLE ROOF LOCK GARNISH

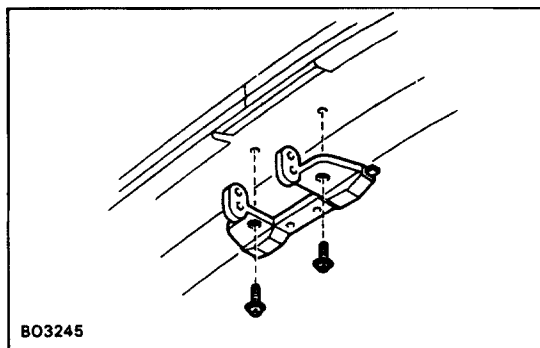


7. REMOVE REMOVABLE ROOF LOCK BASE

Remove 2 screws and the lock base.

8. REMOVE FOLLOWING PARTS:


- Inner rear view mirror
- Sun visors and holders
- Assist grip
- Front pillar garnishes
- Door hole bendings

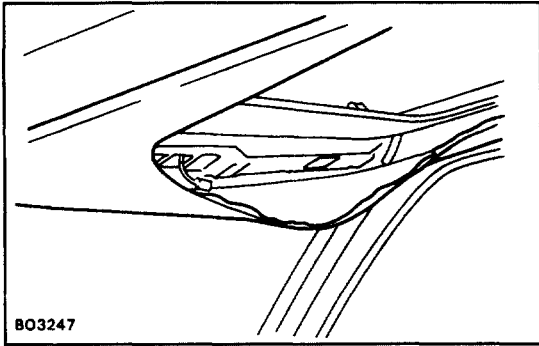

9. REMOVE ROOF HEADLINING

- (a) Remove the roof headlining, as shown and leave it hanging.
- (b) Remove any double-stick tape remaining on the body

NOTICE: Do not damage the roof headlining.

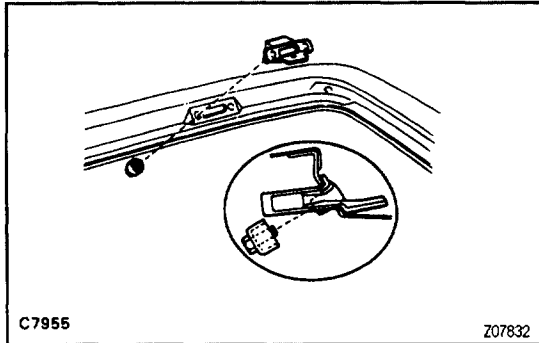

10. REMOVE REMOVABLE ROOF HINGE CASE

Remove 2 bolts and the hinge case.

MOON ROOF INSTALLATION

(See page [BO-34](#))


1. INSTALL REMOVABLE ROOF HINGE CASE

Install the hinge case with the bolts.

Torque: 3.4 N·m (35 kgf·cm, 30 in.·lbf)

HINT:

- Make sure the seal is properly torqued.
- If any part of the seal is damaged, replace the seal and case.

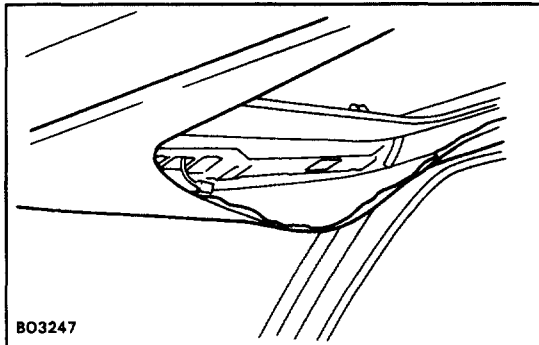


2. INSTALL REMOVABLE ROOF HEADLINING

- (a) Apply double-stick tape to the edge of roof panel.
- (b) Install the roof headlining to the double-stick tape on the body.


3. INSTALL FOLLOWING PARTS:

(See page [BO-34](#))


- Door hole bendings
- Front pillar garnishes
- Assist grip
- Sun visor and holders
- Inner rear view mirror

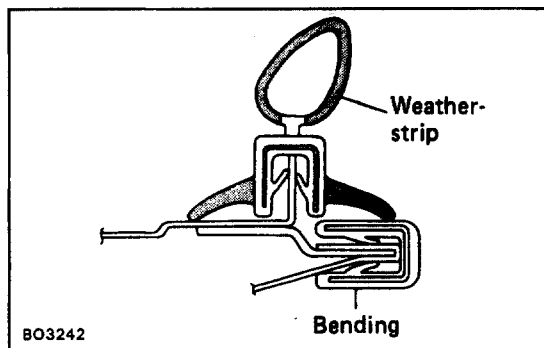


4. **INSTALL REMOVABLE ROOF BENDING**
5. **INSTALL REMOVABLE ROOF INNER WEATHERSTRIP**

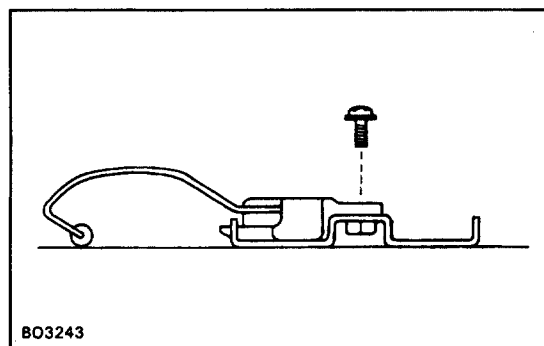

6. **INSTALL REMOVABLE ROOF AUXILIARY CATCH**
Install the auxiliary catch with the bolt.

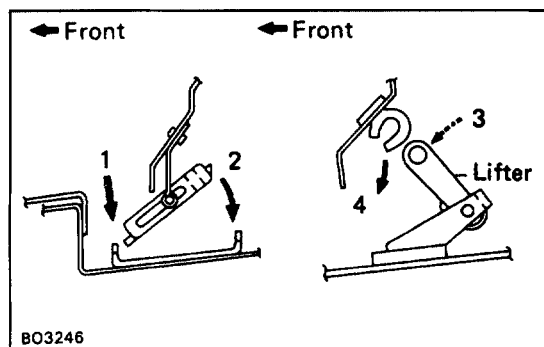

7. **INSTALL WIND DEFLECTOR PANEL**
Install the deflector clips, as shown in the illustration.

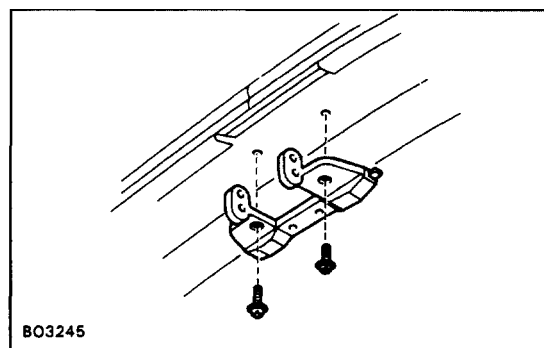


8. **INSTALL REMOVABLE ROOF LOCK BASE**
Install the lock base, and lightly tighten the bolts.

9. **INSTALL REMOVABLE ROOF WITH SUN SHADE**
10. **TORQUE REMOVABLE ROOF LOCK BASE BOLTS**
Torque: 5.9 N·m (60 kgf·cm, 52 in·lbf)
11. **INSTALL REMOVABLE ROOF LOCK GARNISH**

REMOVABLE ROOF DISASSEMBLY

1. REMOVE HANDLE WITH HOLDER
2. REMOVE LEFT/RIGHT HINGE

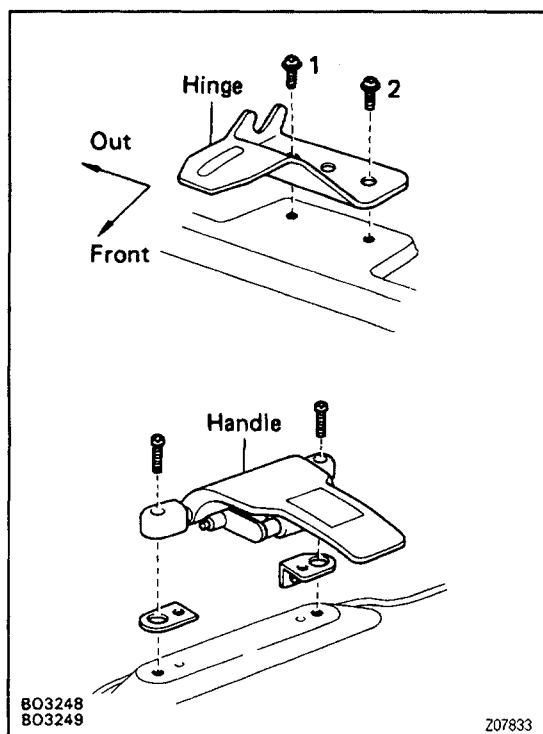

REMOVABLE ROOF ASSEMBRY

1. **INSTALL LEFT/ RIGHT HINGE**
 - (a) Install the hinge with 2 screws.
 - (b) Torque the outside screw.
Torque: 2.9 N·m (30 kgf·cm, 26 in.·lbf)
 - (c) Torque the inside screws.
Torque: 2.9 N·m (30 kgf·cm, 26 in.·lbf)
2. **INSTALL HOLDER AND HANDLE**
 - (a) Install the holder and handle with 2 bolts.
 - (b) Torque the bolts.
Torque: 2.9 N·m (30 kgf·cm, 26 in.·lbf)