
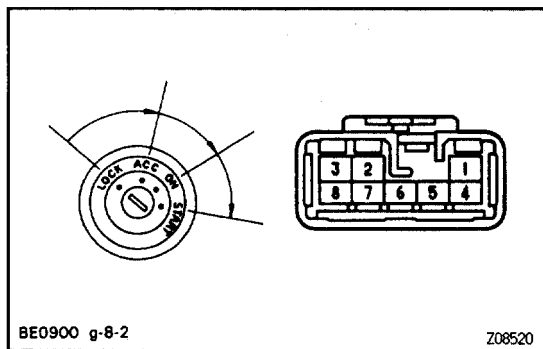


## IGNITION SWITCH PARTS LOCATION

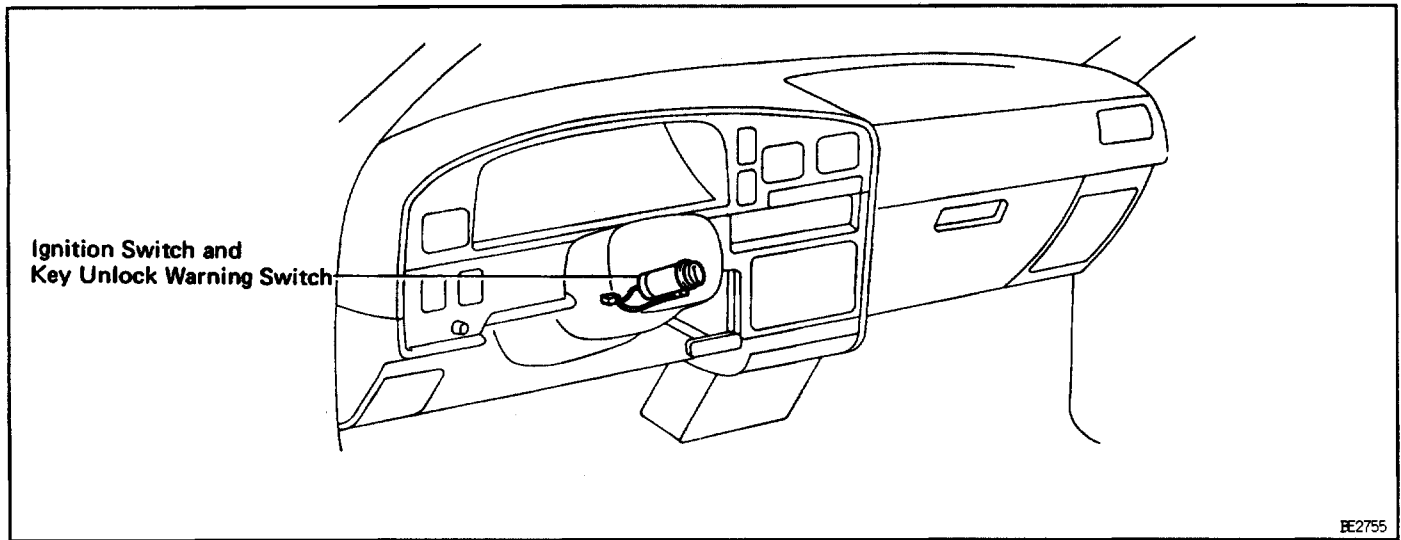


## IGNITION SWITCH INSPECTION

### INSPECT IGNITION SWITCH

#### Continuity

Switch position	Tester connection to terminal number	Specified value
LOCK	—	No continuity
ACC	2 - 3	Continuity
ON	1 - 2 - 3 7 - 8	Continuity
START	1 - 3 - 6 7 - 8	Continuity

If continuity is not as specified, replace the switch.

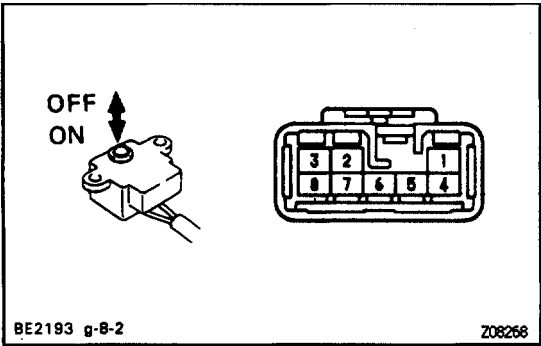

# KEY UNLOCK WARNING SWITCH INSPECTION

INSPECT KEY UNLOCK WARNING SWITCH  
Continuity

Switch position	Tester connection to terminal number	Specified value
OFF (Key removed)	–	No continuity
ON (Key set)	4 – 5	Continuity

If continuity is not as specified, replace the switch.

# DOOR COURTESY SWITCH INSPECTION

INSPECT DOOR COURTESY SWITCH  
(See page [BE-61](#))

# INTEGRATION RELAY INSPECTION

INSPECT INTEGRATION RELAY  
(See page [BE-60](#))