
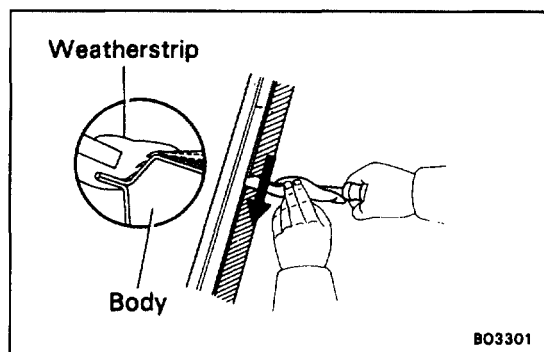



## BACK WINDOW GLASS COMPONENTS

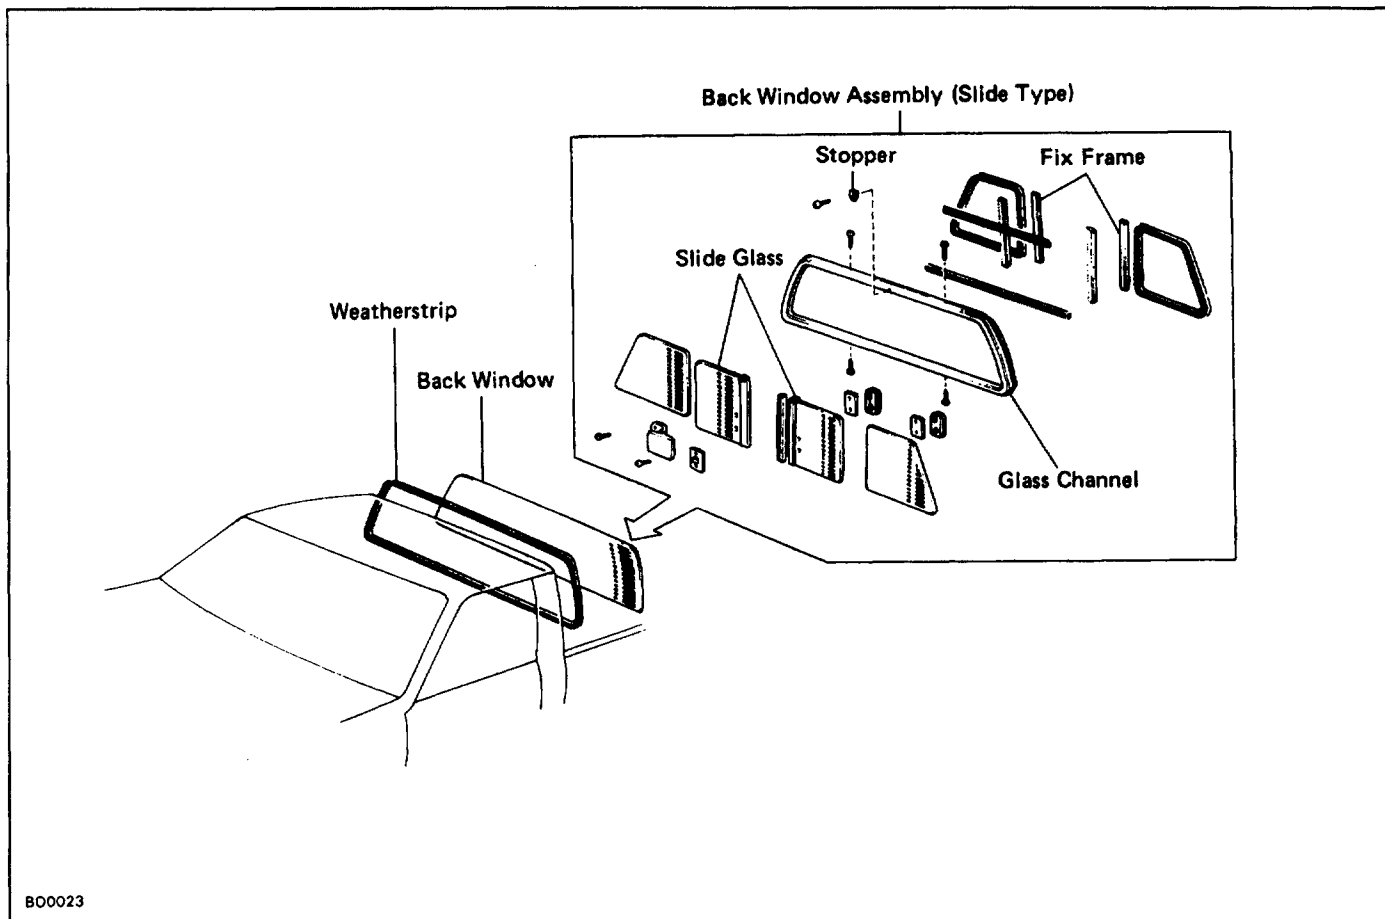


## BACK WINDOW REMOVAL

### REMOVE BACK WINDOW

- (a) Using a screwdriver, loosen the weatherstrip from the body.  
**NOTICE: Be careful not to damage the body paint.**

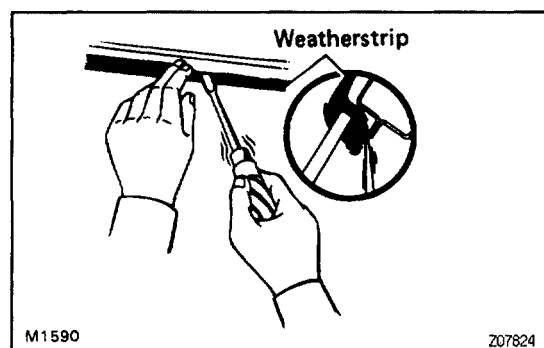


- (b) Pry the lip of the weatherstrip outward from the interior part of the body flange.  
 (c) Pull the glass outwards, and remove it with the weatherstrip.

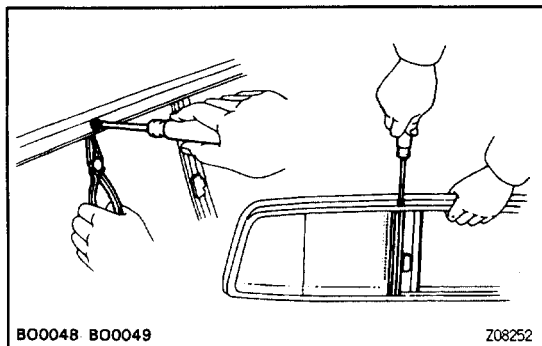

## BACK WINDOW DISASSEMBLY (Slide Glass type)


### 1. REMOVE FOLLOWING PARTS:

- Back window slide glass stoppers
- 4 screws holding 2 fix frames

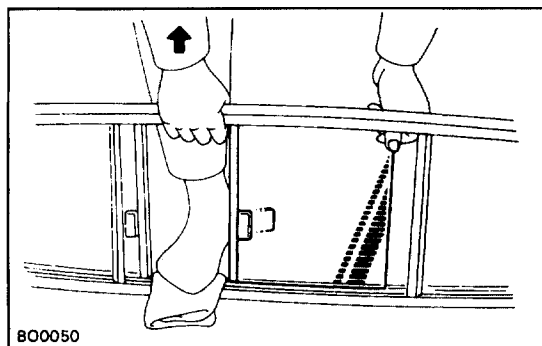


### 2. REMOVE SLIDE GLASS

Pull apart the channels and remove 2 slide glass panes at the center area of the glass channel.

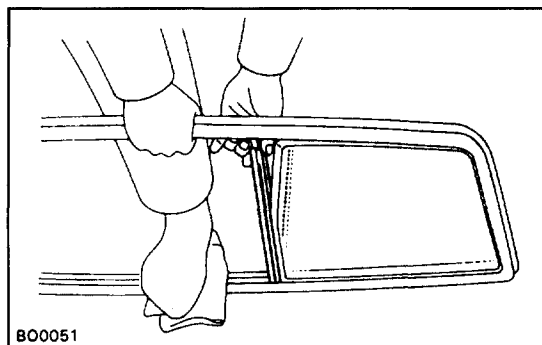

### 3. REMOVE NON-SLIDE GLASS

(a) Pull apart the channels and 2 fix frames, as shown.

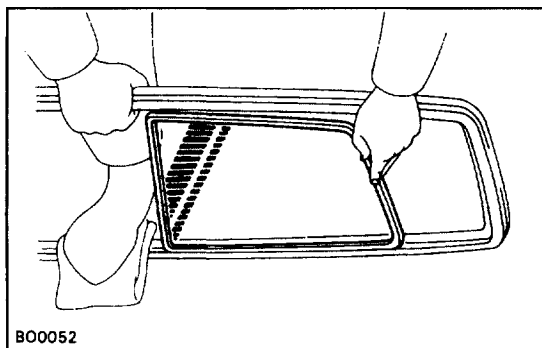

(b) Pull apart the channel and remove 2 non-slide glass panel, as shown.

## BACK WINDOW GLASS ASSEMBLY

### 1. INSTALL NON-SLIDE GLASS


- Apply soapy water to the contact surface of the weatherstrip and glass channel flange.
- Install 2 non-slide glass panes.
- Install 2 fix frames.

### 2. INSTALL SLIDE GLASS

Install 2 slide glass panes at the center area of the glass channel.

### 3. INSTALL FOLLOWING PARTS:

- 4 screws holding 4 frames
- Back window slide glass channel stoppers

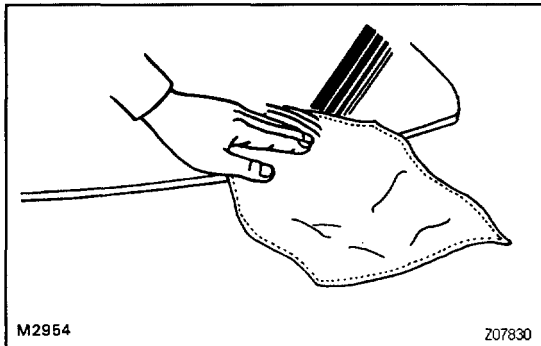


## BACK WINDOW GLASS INSTALLATION

### 1. CLEAN BODY AND GLASS

Using cleaner, wiper off the contact surface of the body and the glass.

### 2. CLEAN WEATHERSTRIP

Using cleaner, clean the weatherstrip surface.

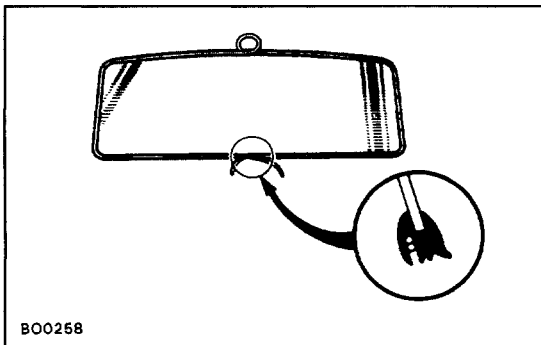


### 3. INSTALL WEATHERSTRIP ON BACK WINDOW

- (a) Attach the weatherstrip to the back window.

**NOTICE:** If the weatherstrip has become hard, it may develop water leaks. Use a new one if possible.


- (b) Apply a working cord along the weatherstrip groove, as shown.

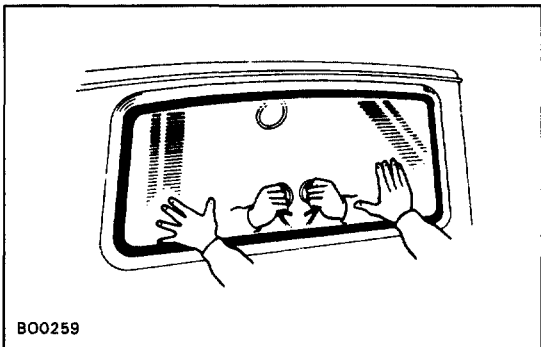

### 4. INSTALL BACK WINDOW GLASS

**HINT:** Begin installation in the middle of the lower part of the glass.

- (a) Hold the back window in position on the body.  
 (b) Install the back window by pulling the cord from the interior, while pushing the outside of the glass with your open hand.

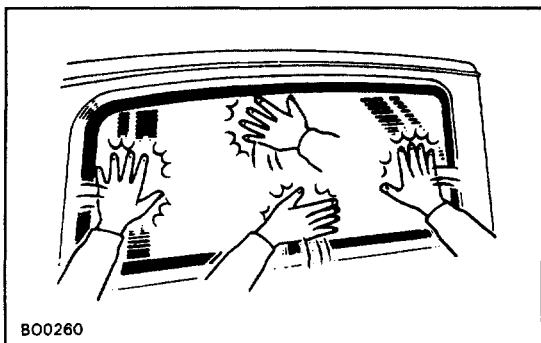

- (c) To snug the back window in place, tap from the outside with your open hand.

**5. INSPECT FOR LEAK AND REPAIR**

- (a) Perform a leak test.
- (b) Seal any with auto glass sealer.  
Part No. 08830-00030 or equivalent