


TRANSFER REMOVAL

1. REMOVE TRANSFER WITH TRANSMISSION

M/T–See pages G58/[MT1-8](#) and R150F/[MT3-15](#)


A/T–See page [AT2-75](#)

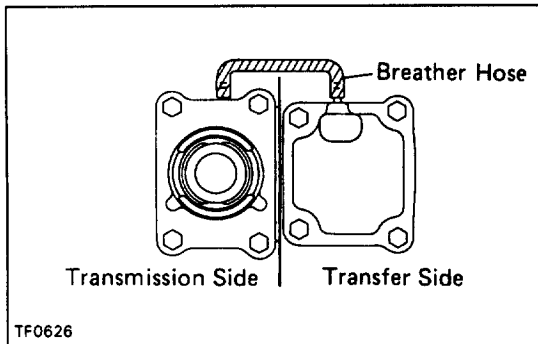


2. 22R-E/G58, A340F:

REMOVE BREATHER HOSE


Disconnect the breather hose from transfer upper cover and transmission control retainer.

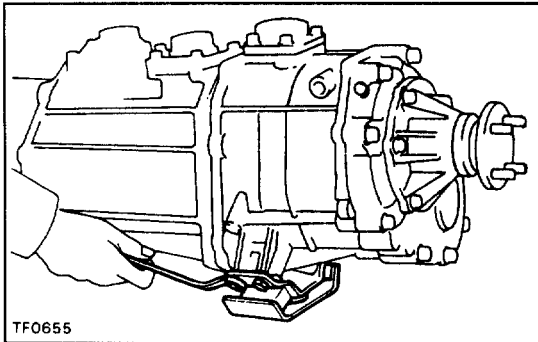

3. REMOVE ENGINE REAR MOUNTING

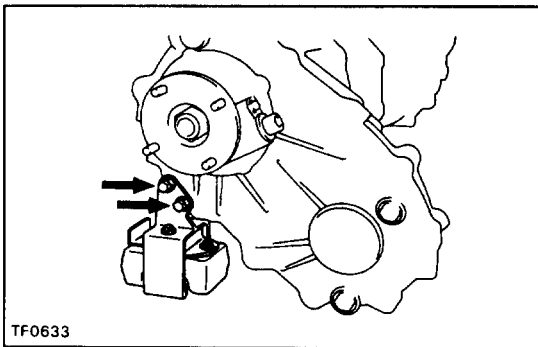

4. REMOVE DYNAMIC DAMPER

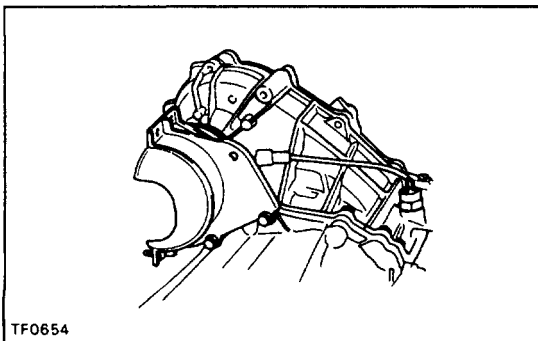

5. REMOVE PROPELLER SHAFT UPPER DUST COVER AND TRANSFER FROM TRANSMISSION

- Remove the dust cover bolt from the bracket.
- Remove the transfer adaptor rear mounting bolts.
- Pull the transfer straight up and remove it from the transmission.

HINT: Take care not to damage the adaptor rear oil seal with the transfer input gear spline.