




VEHICLE LIFT AND SUPPORT LOCATIONS

[2WD]

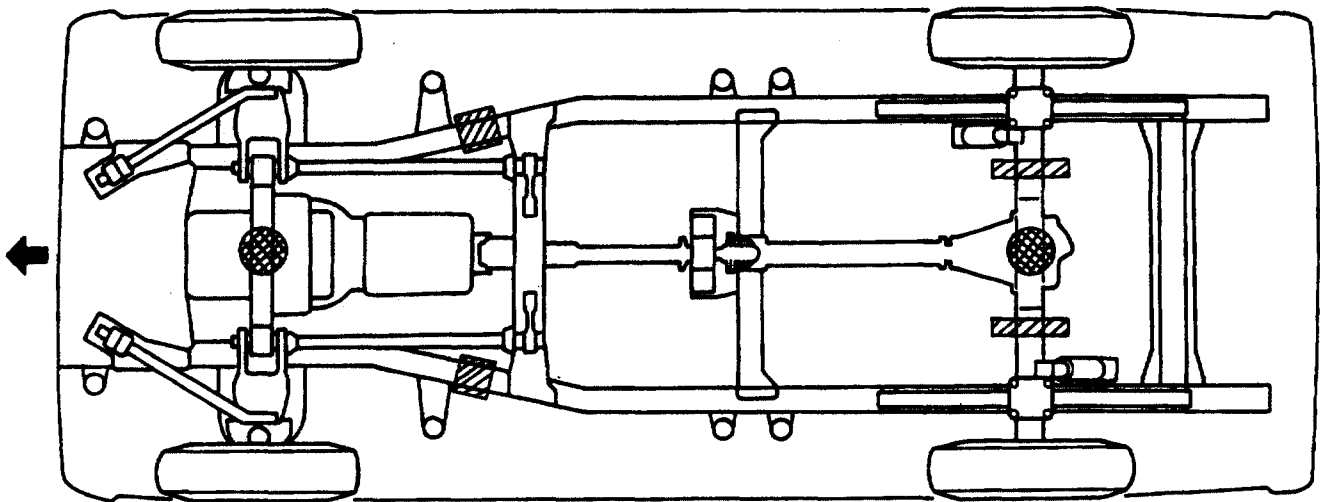

[4WD]

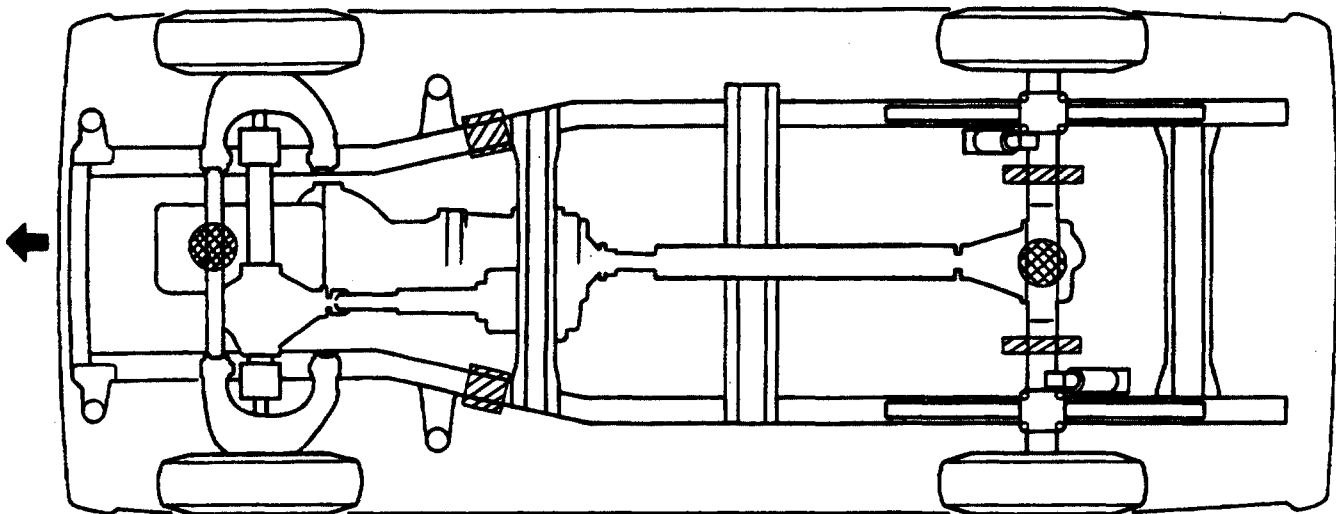

JACK POSITION 
 Front Center of crossmember
 Rear Under the rear differential

SUPPORT POSITION
 Safety stand 

IN0012
 IN0106