
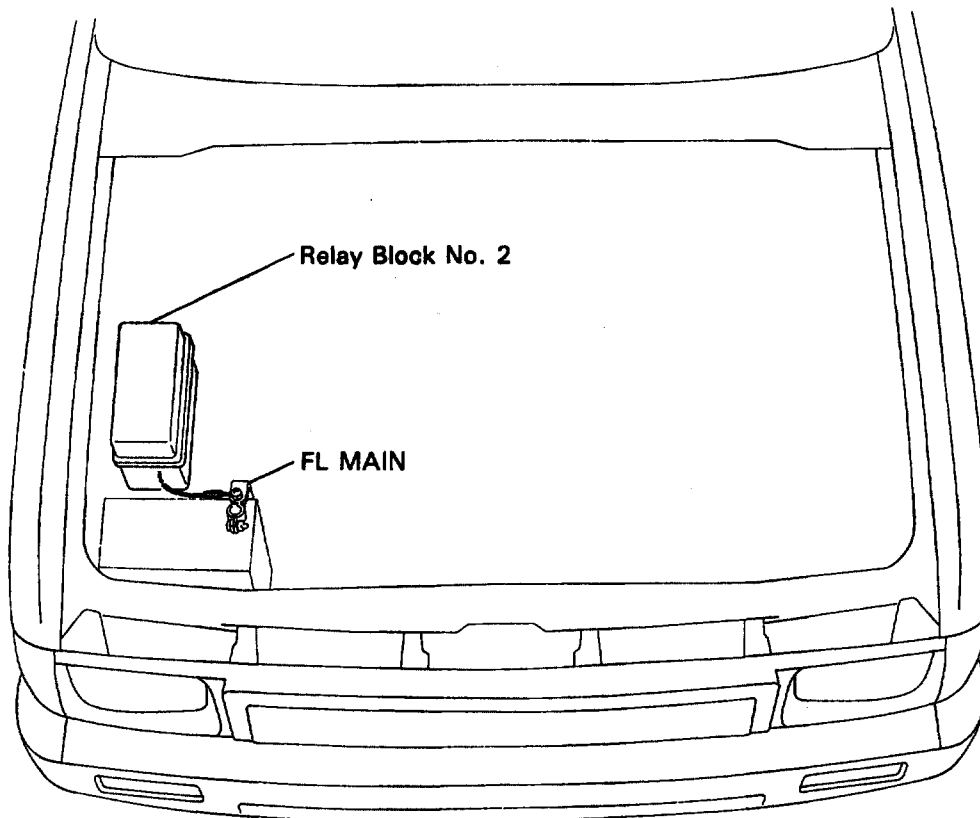
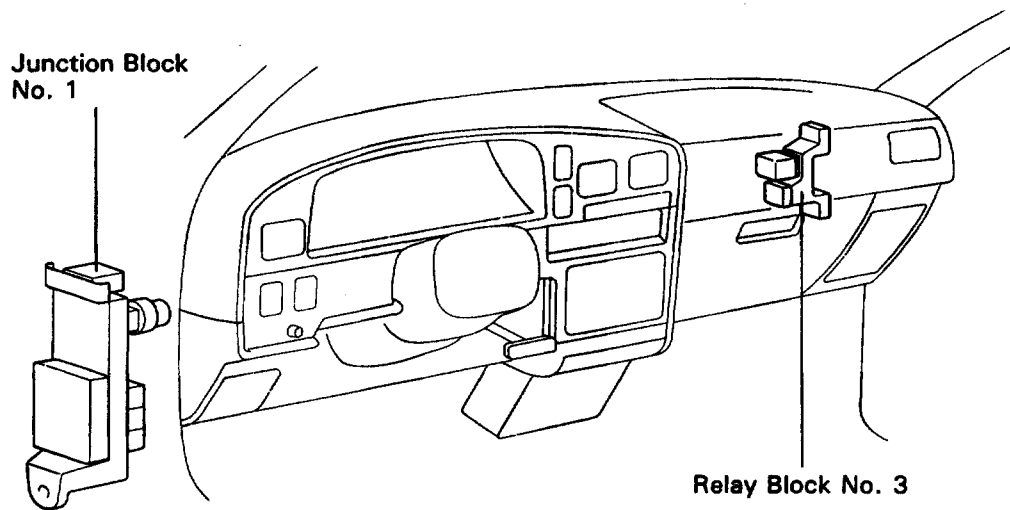


## POWER SOURCE PARTS LOCATION

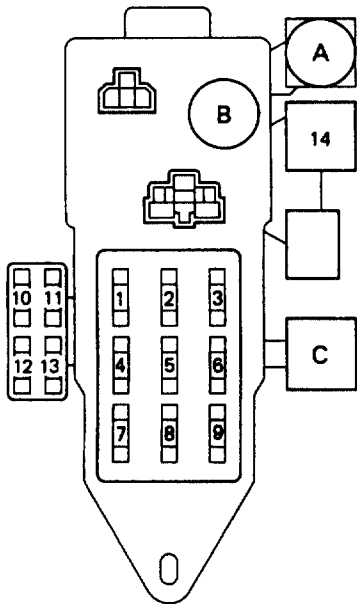


**Junction Block No. 1****Fuses**

1. ENGINE	10A
2. IGN	7.5A
3. TAIL	1.5A
4. WIPER	20A
5. GAUGE	10A
6. STOP	15A
7. RADIO	7.5A
8. CIG	15A
9. TURN	10A
10. REAR ANTILOCK	15A
11. -	-
12. ECM-IG	20A
13. -	-
14. POWER (w/Power Door Lock and Power Window)	30A

**Relay**

- A. Back-up Relay (USA with column A/T)  
DRL Relay No. 4 (CANADA))
- B. Taillight Control Relay
- C. Horn Relay
- 14. Back-Up Relay (CANADA with column A/T)

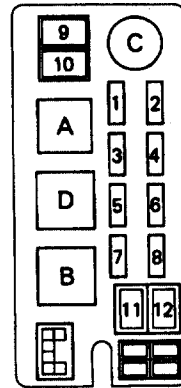**Relay Block No. 2****Fuses**


1. -	-
2. EFI	15A
3. HAZ-HORN	15A
4. DOME	15A
5. HEAD (RH) (USA)	10A
6. HEAD (LH) (USA)	15A
7. -	-
8. -	-
9. ALT (H-fuse)	80A
10. -	-
11. AM1	40A
12. AM2	30A

**(CANADA)**

1. DRL	7.5A
5. HEAD (RH-LO)	10A
6. HEAD (LH-LO)	10A
7. HEAD (RH-HI)	10A
8. HEAD (LH-HI)	10A

**Relays**

- A. Headlight Dimmer Relay (CANADA)
- B. Headlight Control Relay
- C. EFI Main Relay
- D. Starter Relay

**Relay Block No. 3****Fuses**

1. A/C	10A
2. HEATER	30A

**Relay**

- A. Heater Relay

## WIRING DIAGRAM

