


STARTER RELAY


STARTER RELAY INSPECTION

LOCATION: The relay is located in the No.1 junction block on the driver's side.

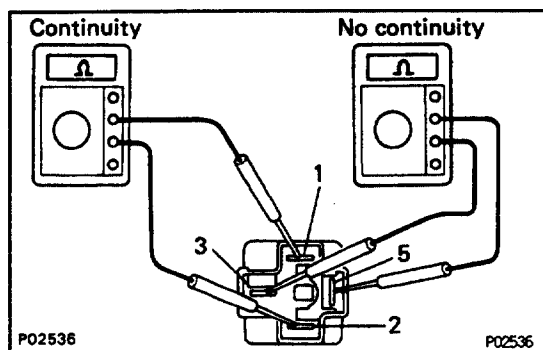

1. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- (b) Check that there is no continuity between terminals 3 and 5. If continuity is not as specified, replace the relay.

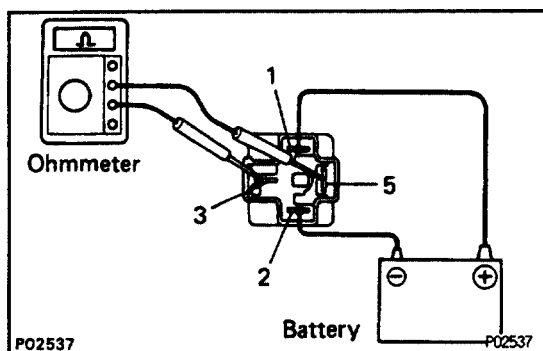

2. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.
- (b) Check that there is continuity between terminals 3 and 5. If operation is not as described, replace the relay.

CLUTCH START SWITCH

M/T only:

(See CL section)

PARK-NEUTRAL POSITION (PNP) SWITCH

A/T only: