



TRANSFER REMOVAL

1. REMOVE TRANSFER WITH TRANSMISSION

MT–See page [MT2-15](#)

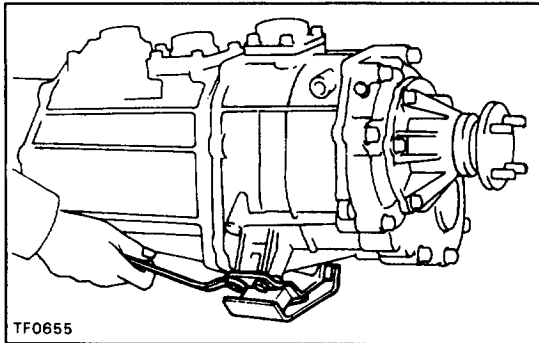

2. REMOVE ENGINE REAR MOUNTING

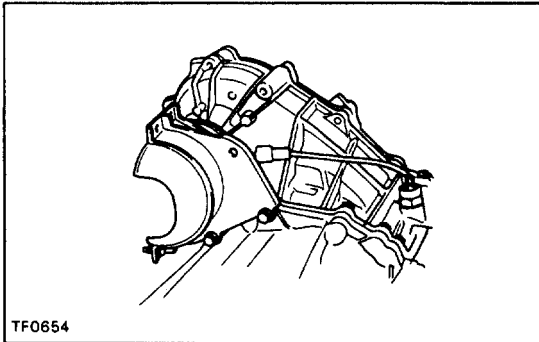

3. REMOVE PROPELLER SHAFT UPPER DUST COVER AND TRANSFER FROM TRANSMISSION

- Remove the dust cover bolt from the bracket.
- Remove the transfer adaptor rear mounting bolts.
- Pull the transfer straight up and remove it from the transmission.

HINT: Take care not to damage the adaptor rear oil seal with the transfer input gear spline.