
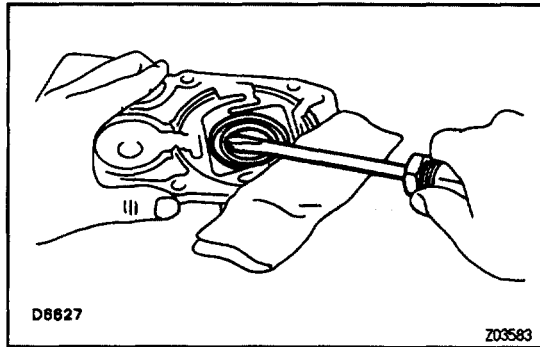



## FRONT BEARING RETAINER COMPONENTS

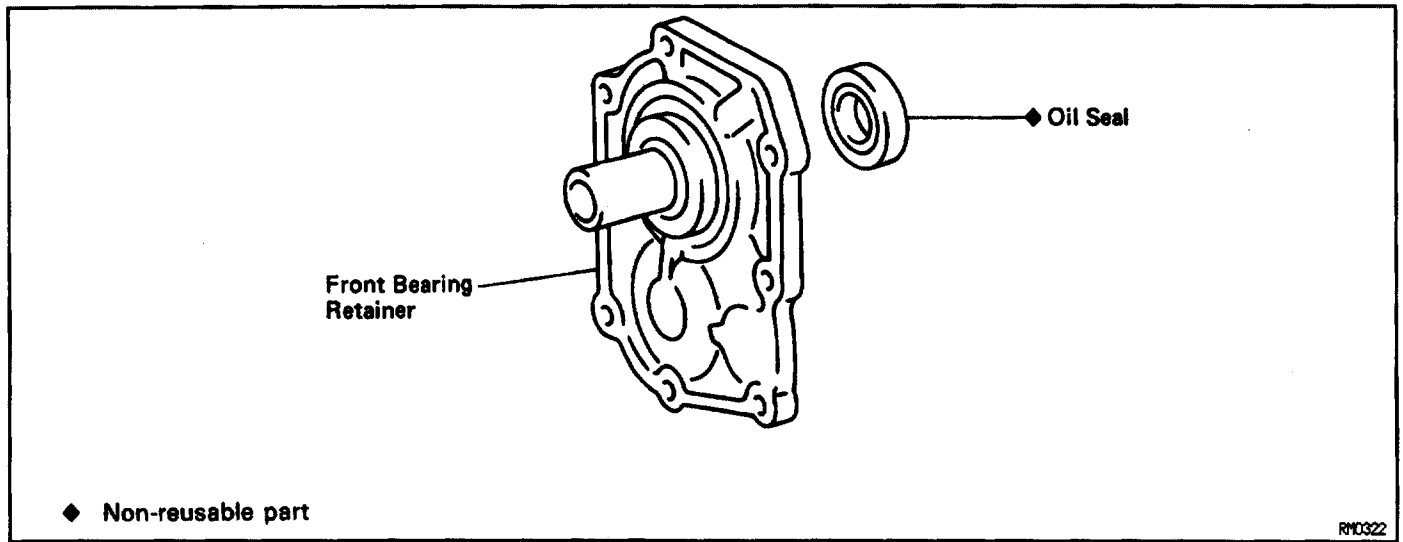

### OIL SEAL REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

- (a) Using a screwdriver, pry out the oil seal.

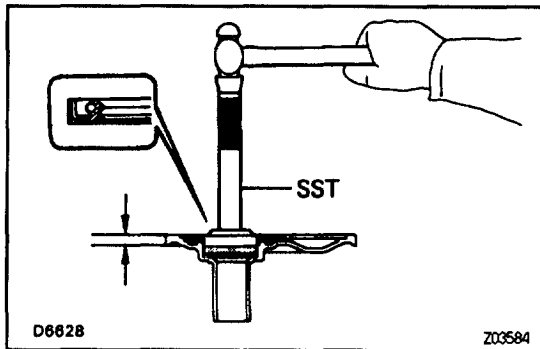

- (b) Using SST and a hammer, drive in a new oil seal.  
SST 09608-35014 (09608-06020, 09608-06090)

Oil seal depth:

11.2-12.2 mm (0.441-0.480 in.)

Transmission case installation surface.