


RECEIVER

ON-VEHICLE INSPECTION

CHECK SIGHT GLASS, FUSIBLE PLUG AND FITTING FOR LEAKAGE

Using a gas leak tester, replace as necessary.

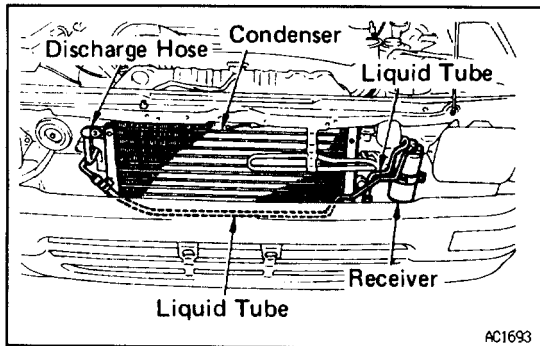

RECEIVER REMOVAL

1. **RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM**
2. **DISCONNECT 2 LIQUID TUBES FROM RECEIVER**
HINT: Cap the open fittings immediately to keep moisture out of the system.
3. **REMOVE RECEIVER FROM RECEIVER HOLDER**

RECEIVER INSTALLATION

1. **INSTALL RECEIVER IN RECEIVER HOLDER**
HINT: Do not remove the blind plugs until ready for connection.
2. **CONNECT 2 LIQUID TUBES TO RECEIVER**
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
3. **IF RECEIVER WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR**
Add 20 cc (0.71 fl.oz.)
Compressor oil:
ND-OIL 6 or equivalent
4. **EVACUATE AIR FROM REFRIGERATION SYSTEM**
5. **CHARGE AIR CONDITIONING SYSTEM WITH REFRIGERANT AND CHECK FOR GAS LEAKAGE**
Specified amount:
750 ± 50 g (26.45 ± 1.76 oz.)