



DESCRIPTION


PARTS LOCATION





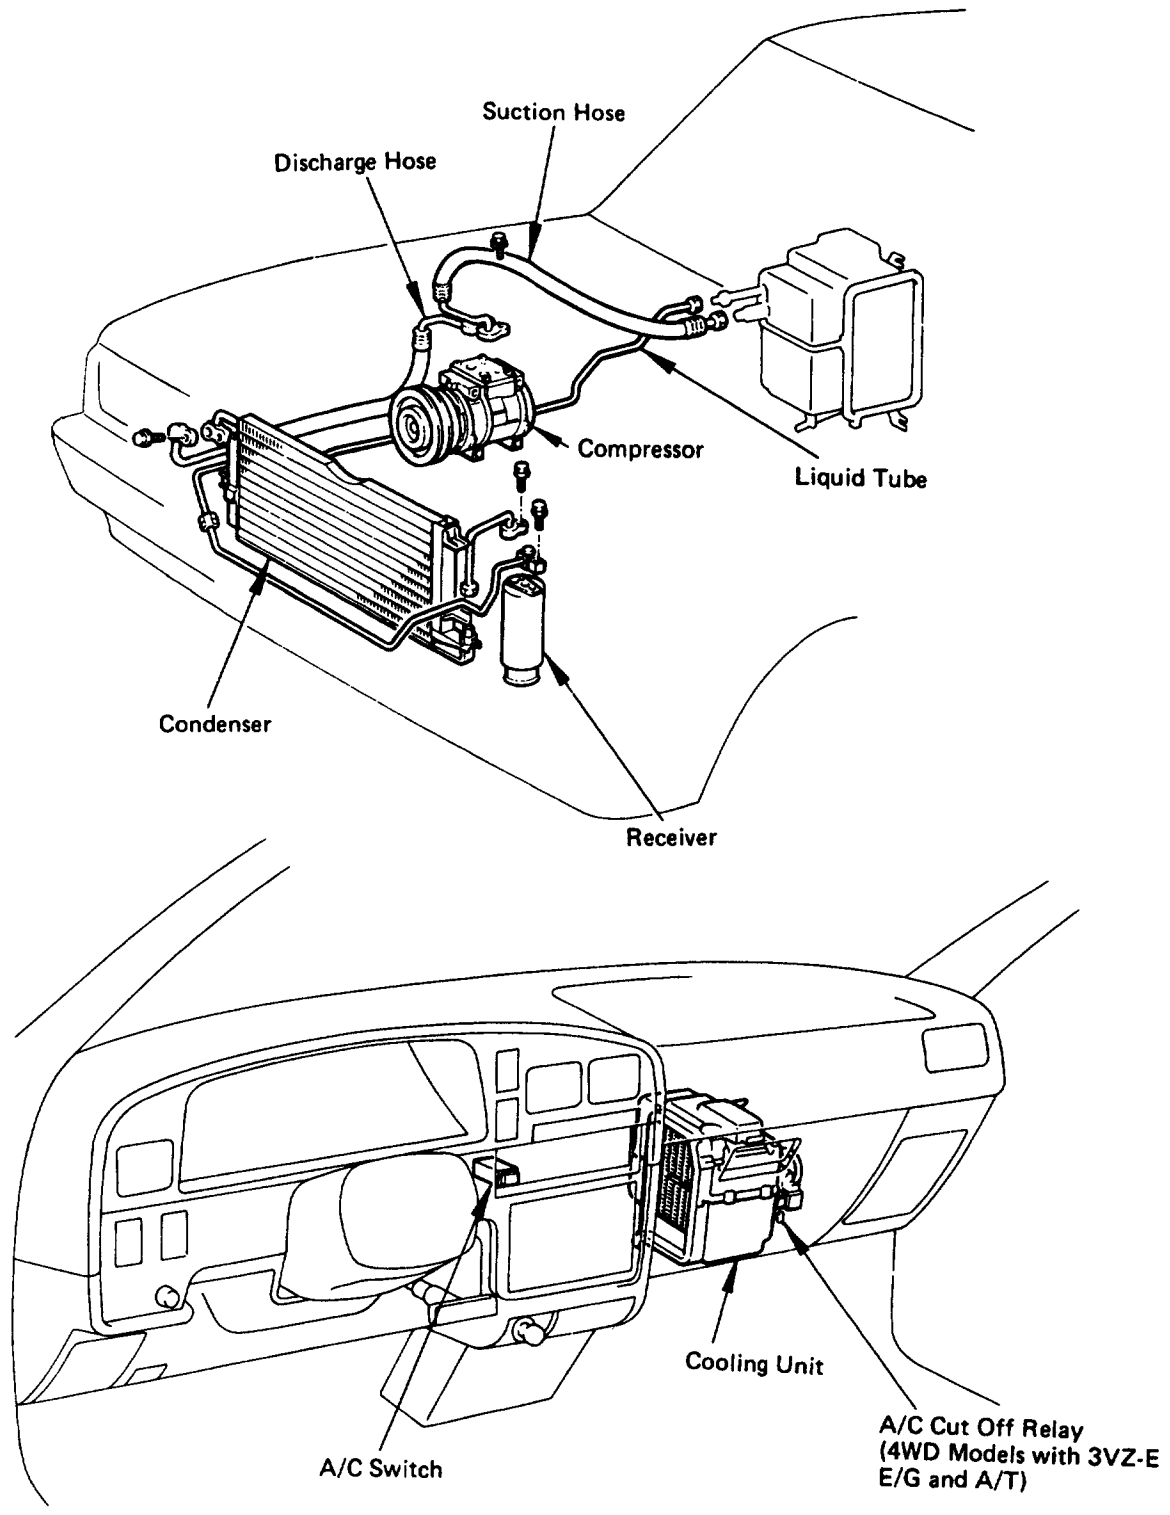


AC1852
AC2240

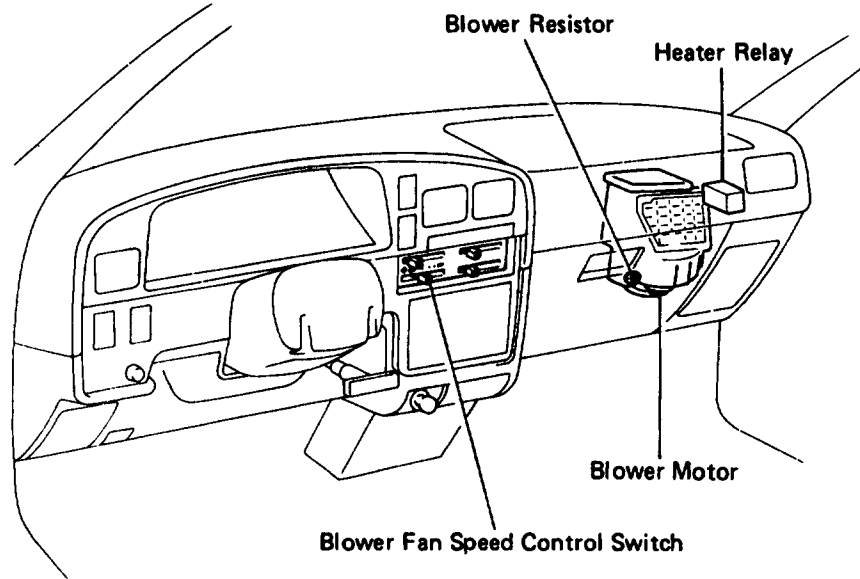


ELECTRICAL WIRING DIAGRAM

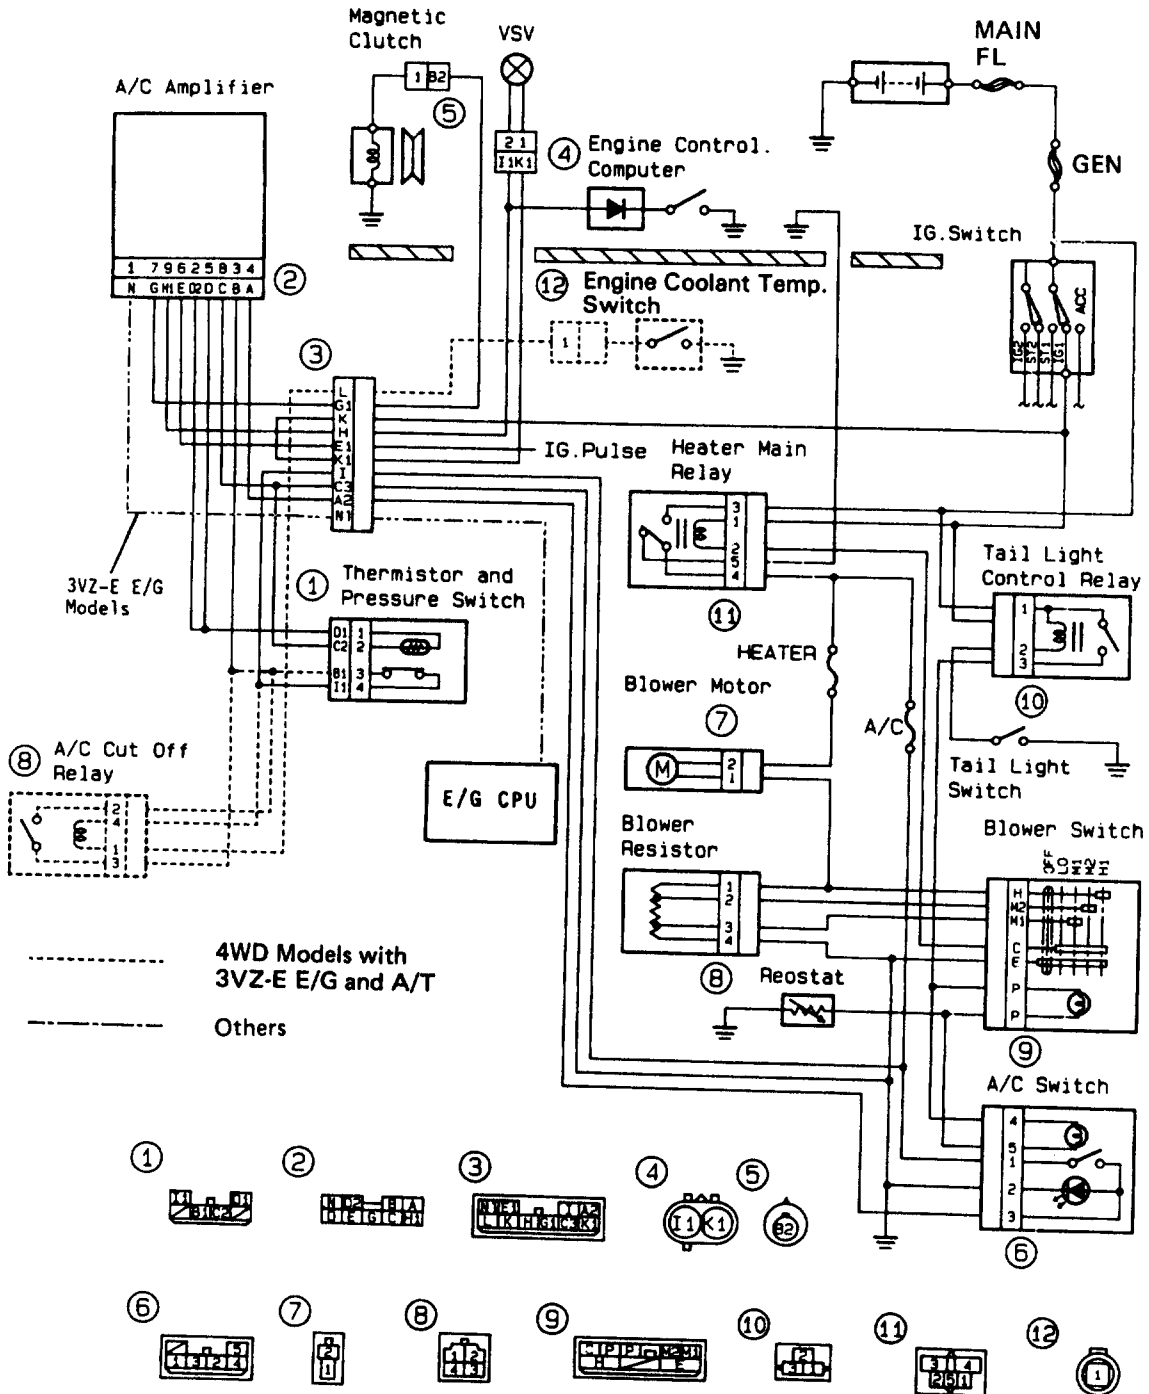

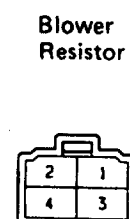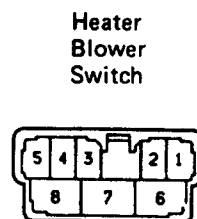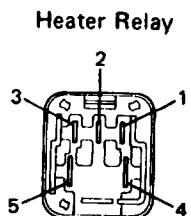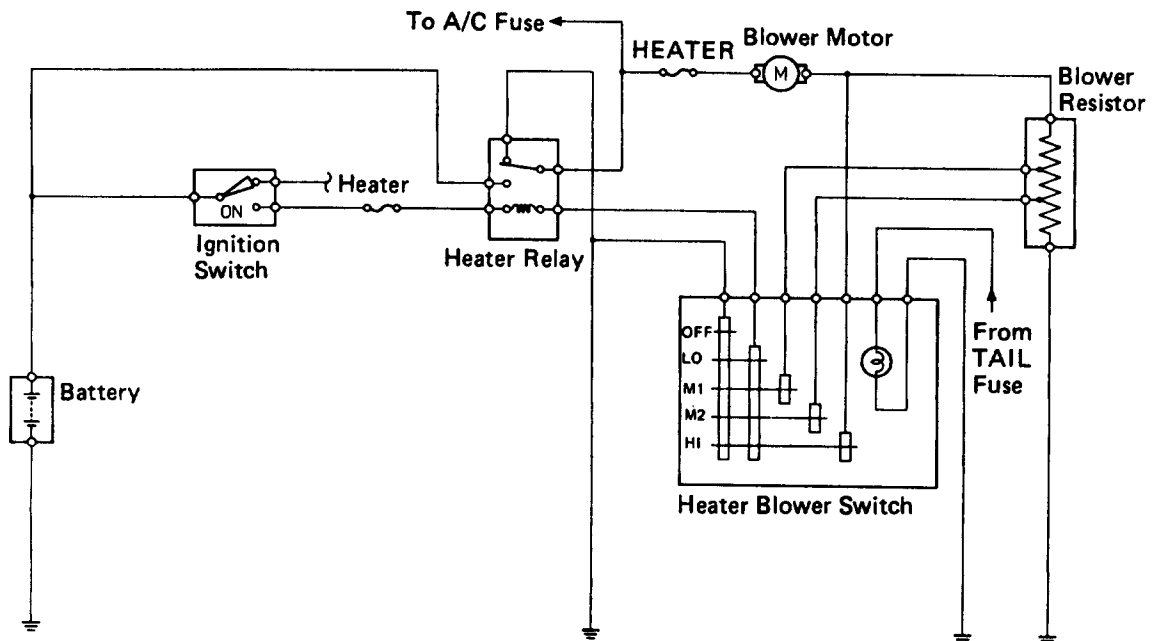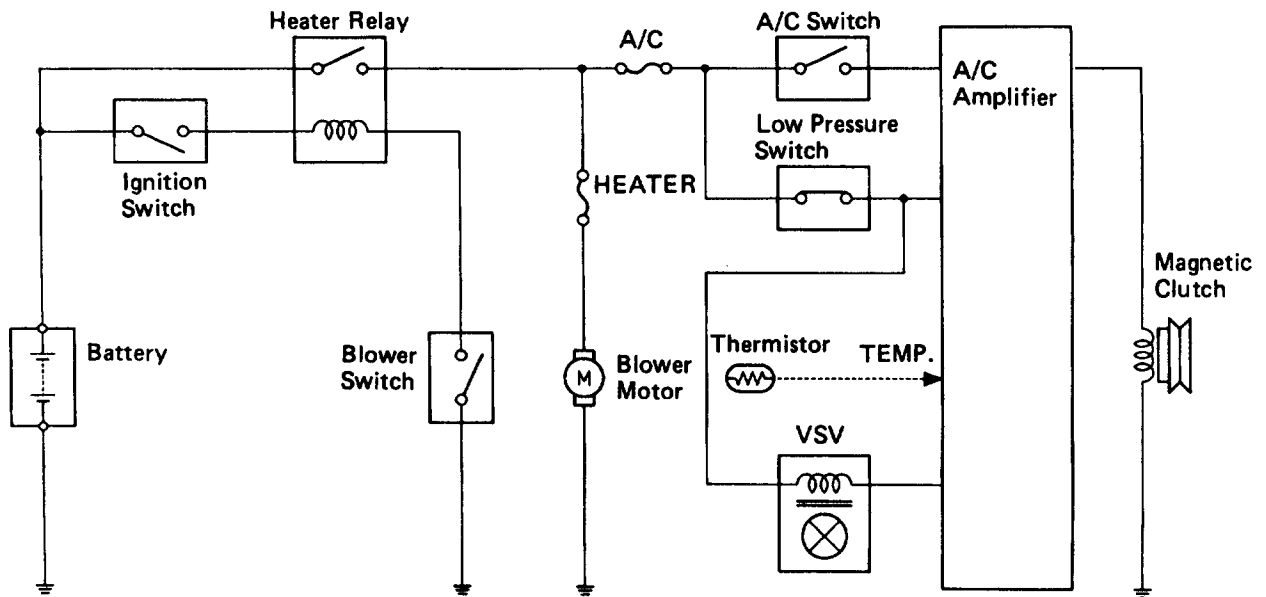

AC1685
BE3162
BE1850 H-2-2 SH-8-2 H-4-2

DAMPERS POSITION

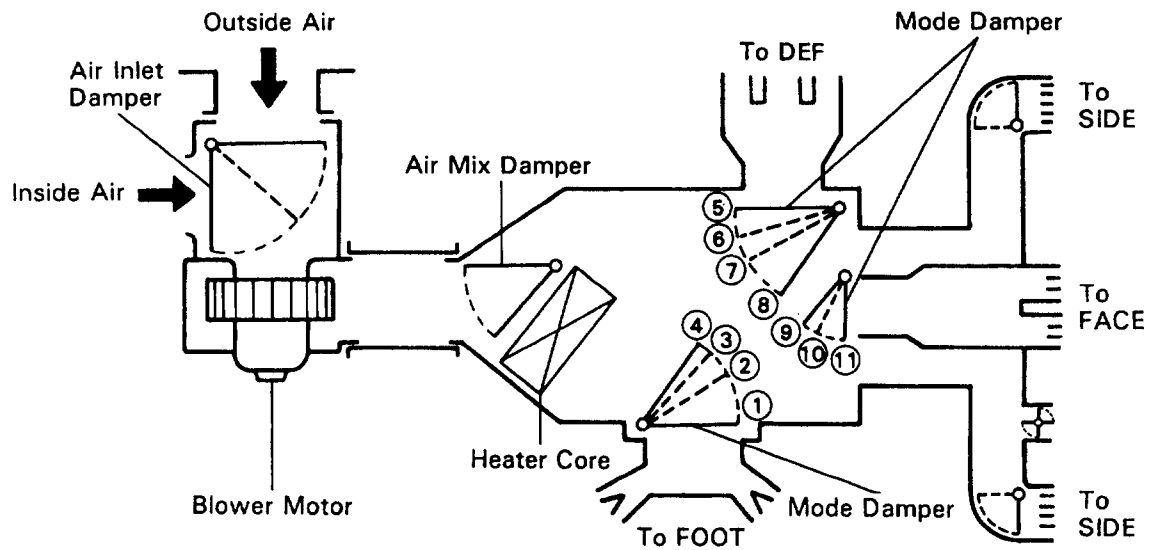

Mode	Air Flow Mode Damper Posions	Air Flow Vents				Center of Driver's Seat
		Center	Side	Foot	Def.	
Face	① ⑤ ⑨	○	○			○
Bi-Level	② ⑤ ⑩	○	○	○		○
Foot	④ ⑥ ⑪		○	○	○	
Foot/Def.	③ ⑦ ⑪		○	○	○	
Def.	① ⑧ ⑪		○		○	

N09849
00018E The size of circule (○) indicates the proportion of the air flow volume.