
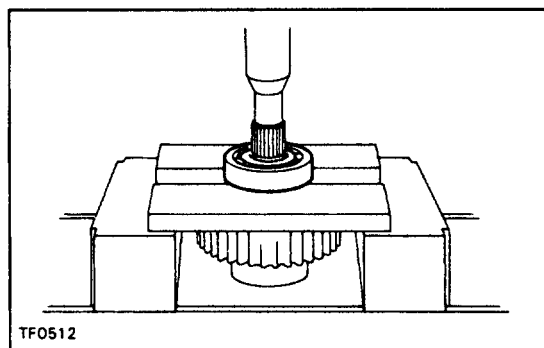



DRIVEN SPROCKET COMPONENTS

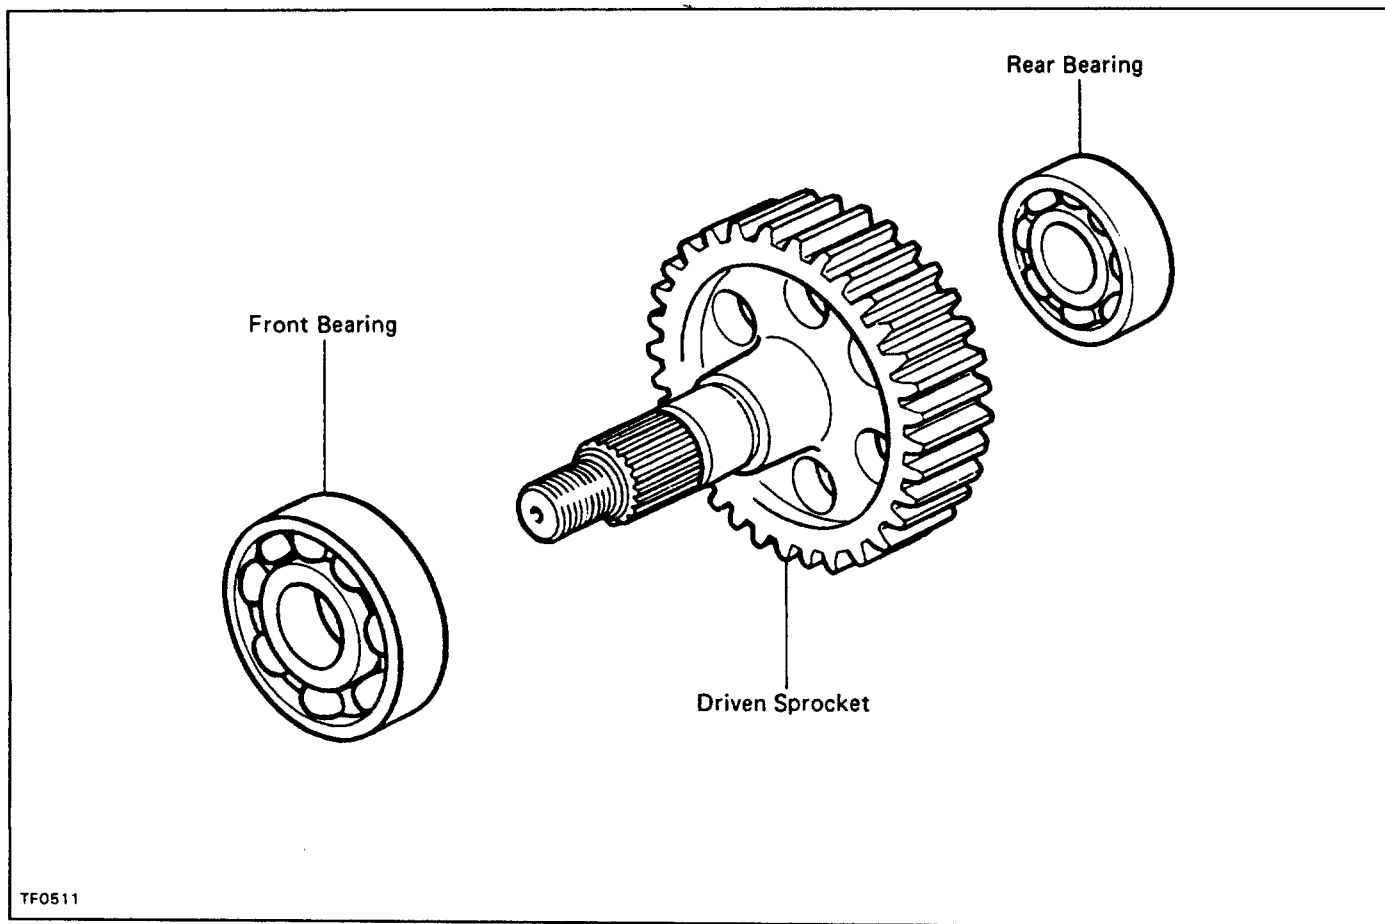

DRIVEN SPROCKET DISASSEMBLY


1. REMOVE FRONT BEARING

Using a press, remove the front bearing.

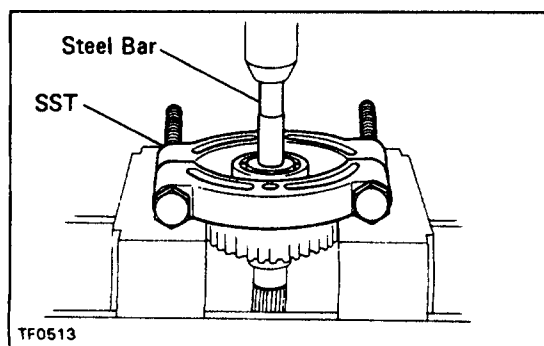

2. REMOVE REAR BEARING


Using SST and a press, remove the rear bearing.
SST 09950-00020

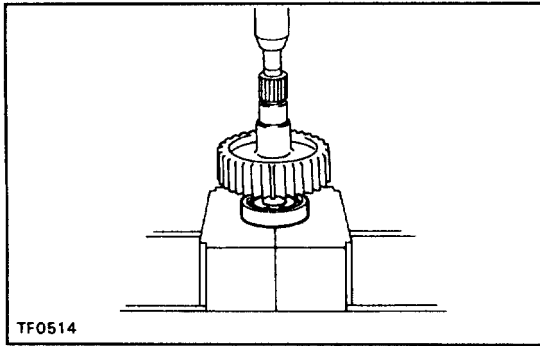

DRIVEN SPROCKET ASSEMBLY

1. INSTALL REAR BEARING

Using a press, install the rear bearing.

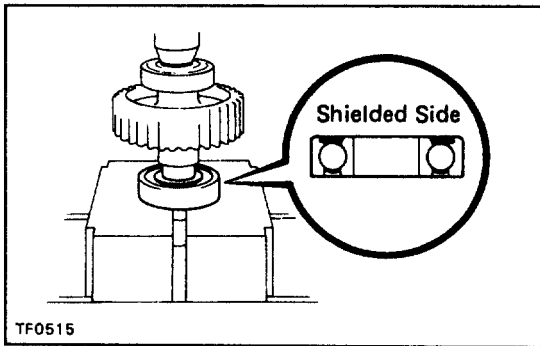

2. INSTALL FRONT BEARING

Using a press, install the front bearing.

HINT: Ensure the bearing is installed in the correct direction.