


## AIR CONDITIONING CUTOFF RELAY (4WD with 3VZ-E E/G and A/T)

### RELAY REMOVAL

(See page [AC-26](#))

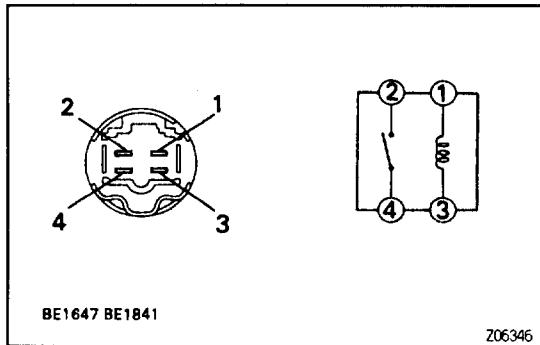

### RELAY INSPECTION

#### INSPECT A/C CUT-OFF RELAY

##### Continuity

Condition	Tester connection to terminal number	Specified value
Constant	1-3	Continuity
Apply B+ between terminals 1 and 3.	2-4	Continuity

If continuity is not as specified, replace the relay.

### RELAY INSTALLATION

(See page [AC-27](#))