
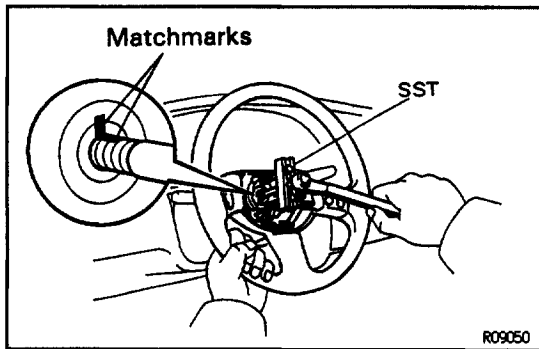


ASSEMBLY REMOVAL AND INSTALLATION


Remove and install the parts, as shown.

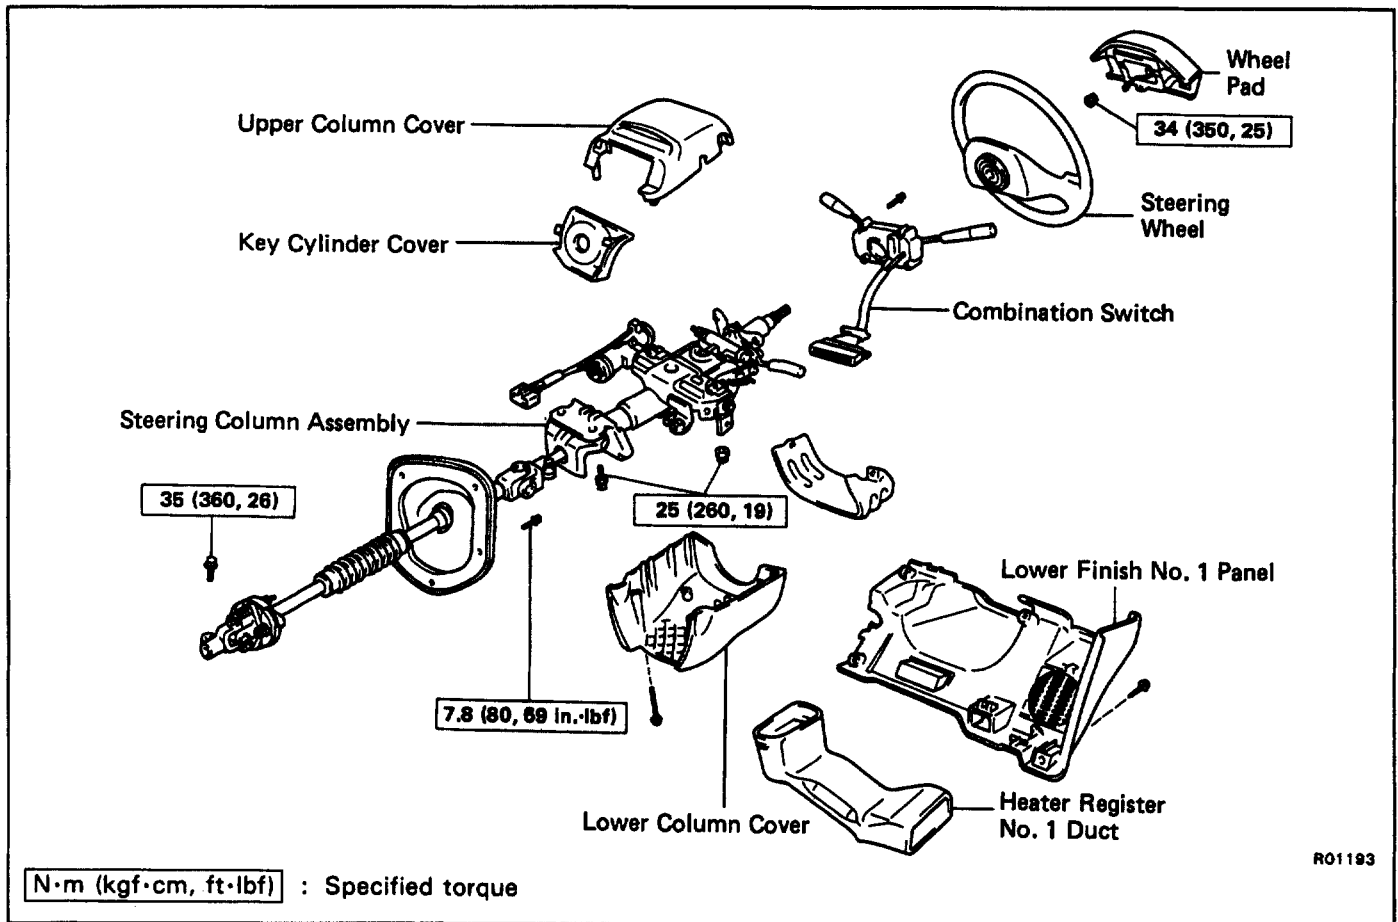

MAIN POINTS OF REMOVAL AND INSTALLATION

1. REMOVE STEERING WHEEL

- Remove the steering wheel pad.
 - Place matchmarks on the steering wheel and main shaft.
 - Using SST, remove the steering wheel.
- SST 09609-20011

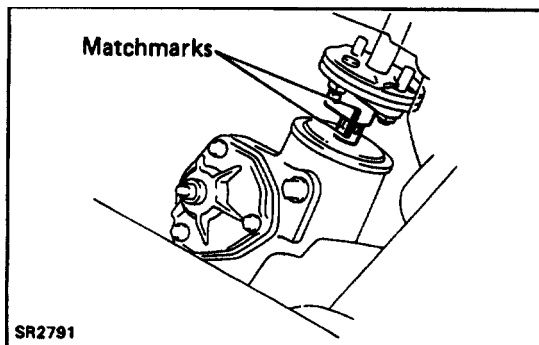

2. DISCONNECT INTERMEDIATE SHAFT

- Place matchmarks on the control valve shaft and intermediate shaft.
- Loosen the intermediate shaft upper bolt.
- Remove the intermediate shaft lower bolt.
- Slide the shaft backward to disconnect the shaft from the control valve assembly.