


# HEATER MAIN RELAY

## RELAYS REMOVAL

- 1. DISCONNECT NEGATIVE (-) CABLE FROM BATTERY
- 2. REMOVE HEATER MAIN RELAY FROM JUNCTION BLOCK NO.2

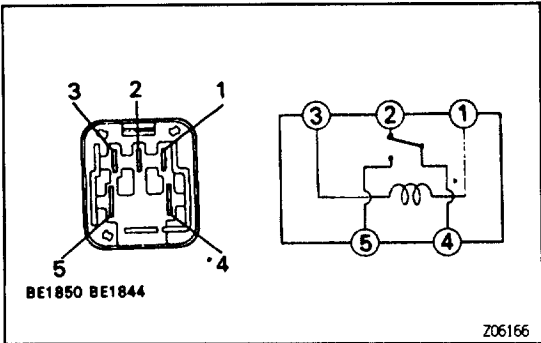

## RELAY INSPECTION

### INSPECT HEATER MAIN RELAY

#### Continuity

Condition	Tester connection to terminal number	Specified value
Constant	1-3 2-4	Continuity
Apply B+ between terminals 1 and 3.	4-5	Continuity

If continuity is not as specified, replace the relay.

## RELAY INSTALLATION

- 1. INSTALL HEATER MAIN RELAY
- 2. CONNECT NEGATIVE (-) CABLE TO BATTERY