

## BLOWER RESISTOR

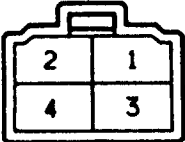




### BLOWER RESISTOR REMOVAL

1. **DISCONNECT NEGATIVE (-) CABLE FROM BATTERY**
2. **REMOVE BLOWER RESISTOR**
  - (a) Disconnect the connector from the blower resistor.
  - (b) Remove 2 screws and the blower resistor.

### BLOWER RESISTOR INSPECTION

#### INSPECT BLOWER RESISTOR

##### Continuity

	Terminal	2	1	3	4
	Condition				
	Constant				

H-4-2

If continuity is not as specified, replace the blower resistor.

### BLOWER RESISTOR INSTALLATION

1. **INSTALL BLOWER RESISTOR**
  - (a) Install the blower resistor with 2 screws.
  - (b) Connect the connector to blower resistor.
2. **CONNECT NEGATIVE (-) CABLE TO BATTERY**