
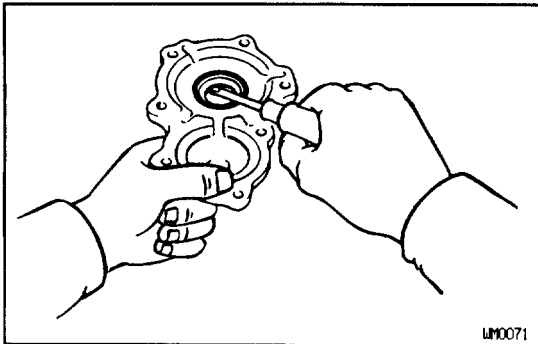



## FRONT BEARING RETAINER COMPONENTS

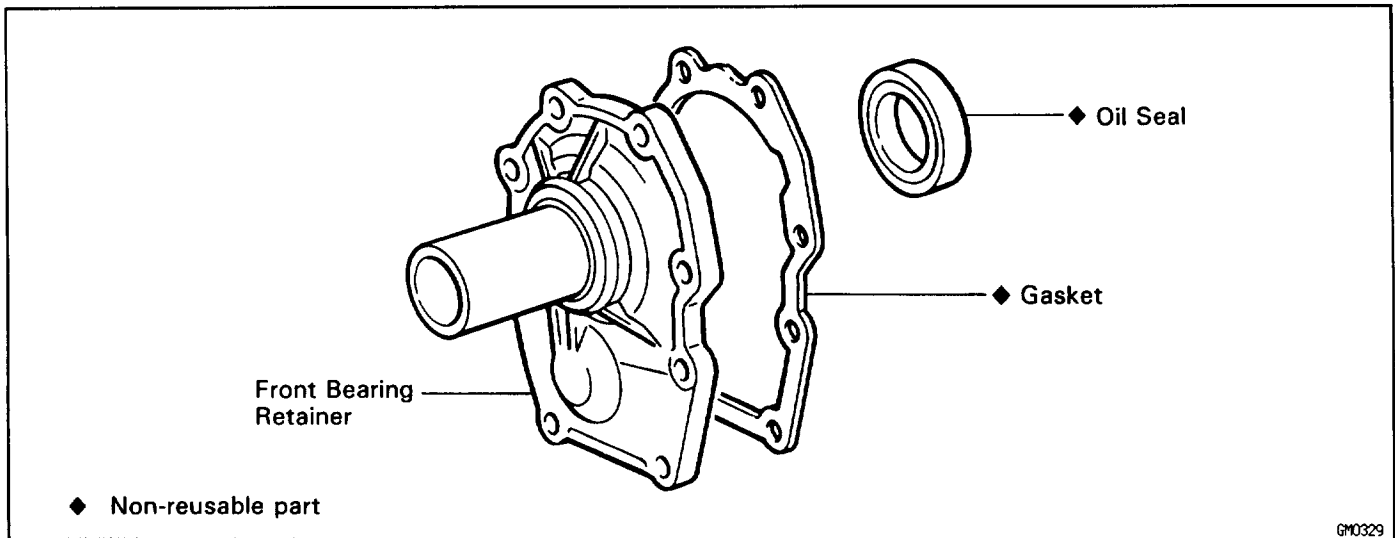

### OIL SEAL REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

- (a) Using a screwdriver, pry out the oil seal.

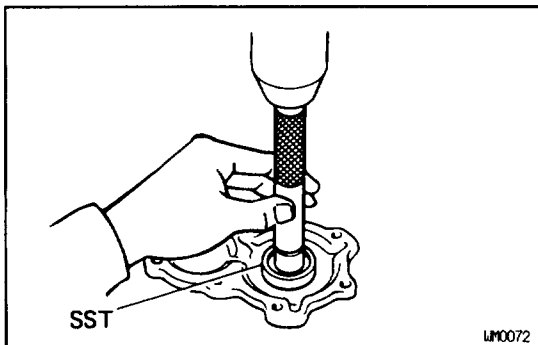

- (b) Using SST and a press, press in a new oil seal.  
SST 09223-50010

Oil seal depth:

12.2-13.2 mm (0.480-0.520 in.)

Transmission case installation surface.

- (c) Coat the lip of the oil seal with MP grease.